


# Maytag GA882 07 - TRANSMISSION-HELICAL DRIVE

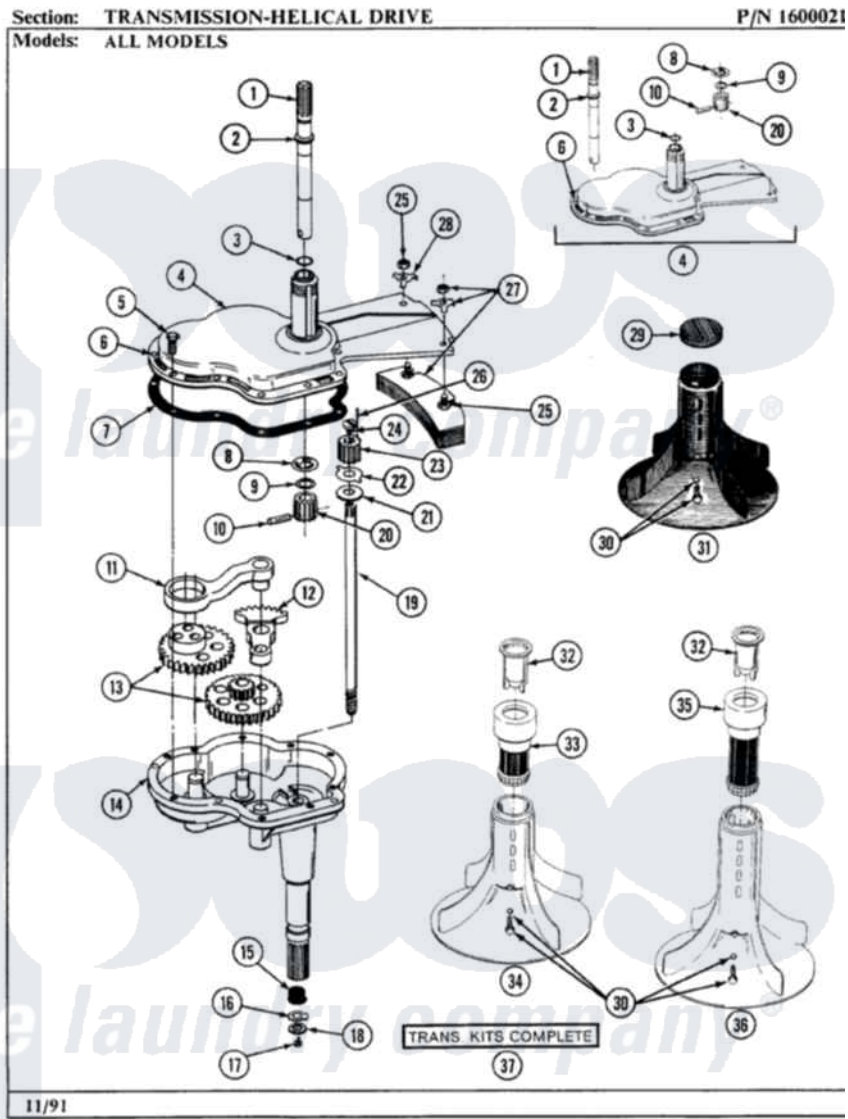

22

Maytag Residential Maytag GA882 Washer Parts Parts Diagram 07 - TRANSMISSION-HELICAL DRIVE  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200730	<a href="#">22002124</a>		Shaft- Agi
2	<a href="#">Y014839</a>			Collar-Drive Shaft
3	<a href="#">210690</a>			Seal, Rubber
4	200813		Not Available	GEAR CASE COVER ASSEMBLY
5	<a href="#">Y015629</a>			Bolt, Grinding Chamber
6	<a href="#">015639</a>			Dowel Pin
7	210632	<a href="#">22210632</a>		Gasket
8	<a href="#">Y015902</a>			Spring For Agitator
9	<a href="#">Y014827</a>			Washer-Center Shaft
10	<a href="#">210183</a>			Groove Pin
11	201463		Not Available	PITMAN WITH WRIST PIN
12	<a href="#">210670</a>			Segment
13	<a href="#">204967</a>			Gear Kit-Power Fin Agitator
14	203193		Not Available	GEAR HOUSING W/STUDS & TUBE
15	206602	<a href="#">207843</a>		Lip Seal Repair Kit

16	<a href="#">211089</a>		Lug, Stop Pulley
17	211375	<a href="#">681582</a>	Screw
18	211090	<a href="#">22003555</a>	Washer, Stop Lug
19	<a href="#">213044</a>		Shaft, Center
20	<a href="#">210054</a>		Pinion
21	211483	<a href="#">6-2114830</a>	Washer- SP
22	<a href="#">211484</a>		Washer, Lug
23	<a href="#">210315</a>		Pinion
24	<a href="#">211486</a>		Screw, 3/8-16 X 1/2 Inch
25	Y052740	<a href="#">62739</a>	Nut, Lock
26	<a href="#">211487</a>		Groov-Pin
27	<a href="#">205811</a>		Counterweight
28	<a href="#">210172</a>		Lock Washer
30	206478	Not Available	SCREW & WASHER FOR AGITATOR
32	212815	Not Available	DISPENSER CUP
35	<a href="#">203265</a>		Lint Filter-Dispenser
36	203323	<a href="#">22004085</a>	Large Agitator
37	203438	<a href="#">W10172457</a>	Transmison

