


Maytag GA9700 07 - TOP COVER, CONSOLE & LID SWITCH

SECTION: TOP COVER, CONSOLE & LID SWITCH
 MODEL: ALL MODELS

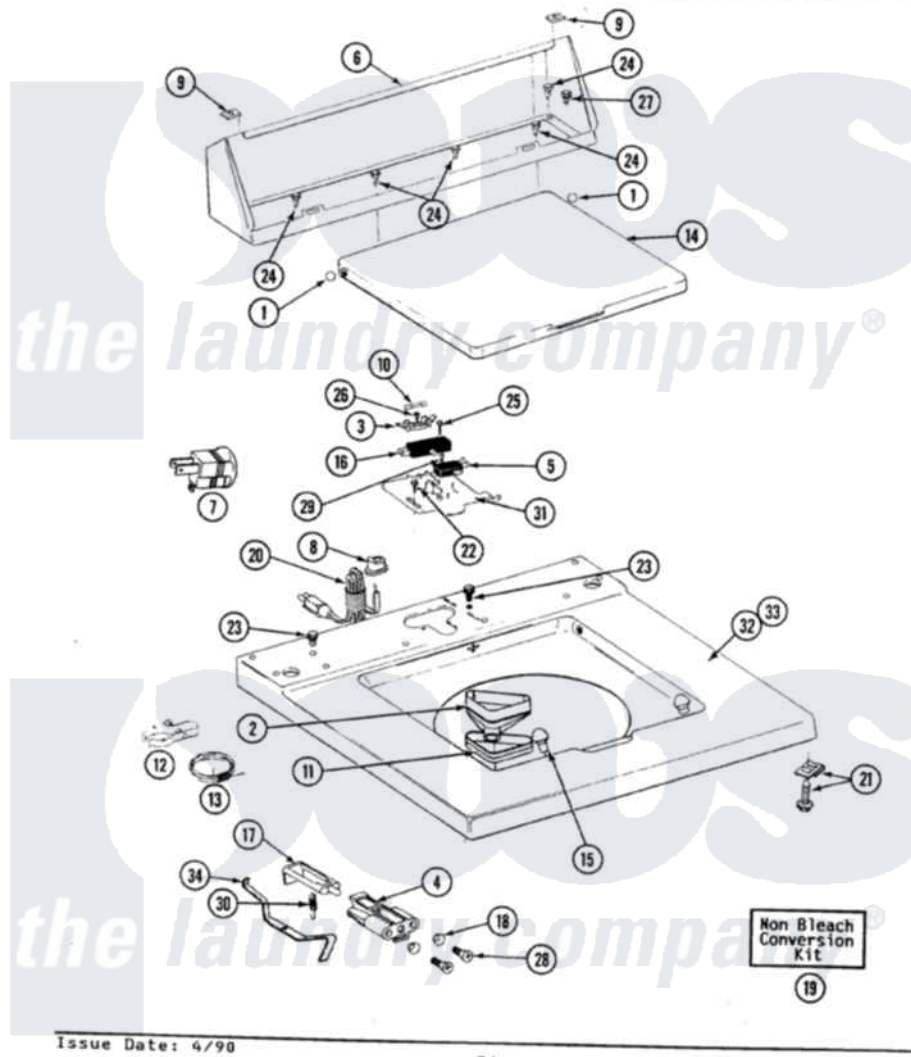

Issue Date: 4/98

34

Maytag Residential Maytag GA9700 Washer Parts Parts Diagram 07 - TOP COVER, CONSOLE & LID SWITCH
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211726			Hinge, Ball Lid
3	207167			Block, Fuse
4	214279	204968		Plunger And Bracket Assembly--W
"	216256		Not Available	BRACKET, UNBALANCE
5	207166			Switch, Check
6	205635M		Not Available	CONSOLE (HVST WHEAT)
7	Y201808			Converter
8	211881			Grommet, Cord Part Not Used-Gas Models Only
9	215075			Fastener, Control Panel To Console
10	207168	22001682		Switch Assembly, Lid W/4amp Fuse
11	214436			Gasket
12	301548			Clamp, Ground Wire
13	311155			Ground Wire And Clamp
14	212073M		Not Available	LID-HARVEST WHEAT

15	212716		Bumper, Lid
16	205415	279347	Switch-Lid
17	215700		Not Available
			LID SWITCH PLUNGER
"	208591		Not Available
			KIT, PLUNGER & BRACKET
18	211500		Washer, Bracket To Top Cover
19	205997		Non-Bleach Conversion Kit
20	204590		Cord, Power
21	204445		Screw And Fastener Assembly
22	207159	489355	Screw, 8 X 1/2
23	210186	3370225	Screw
24	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
25	213501		Screw, No.6-20 X 1-1/8 Inch
26	215705	Y311711	Screw, Fuse Block
27	Y313559		Screw
28	910182	25-7809	Screw, No.6-20 1/2 Flthd Torx
29	912012	3400409	Screw
30	213720		Spring, Lid Switch
31	Y215699	22001678	Bracket, Switch And Fuse
32	207170M		Not Available
			TOP COVER ASSY HVT WHEAT
34	215704		Lever, Unbalance

