


Maytag GDE18CA 04 - CONTROL PANEL (SERIES 00)

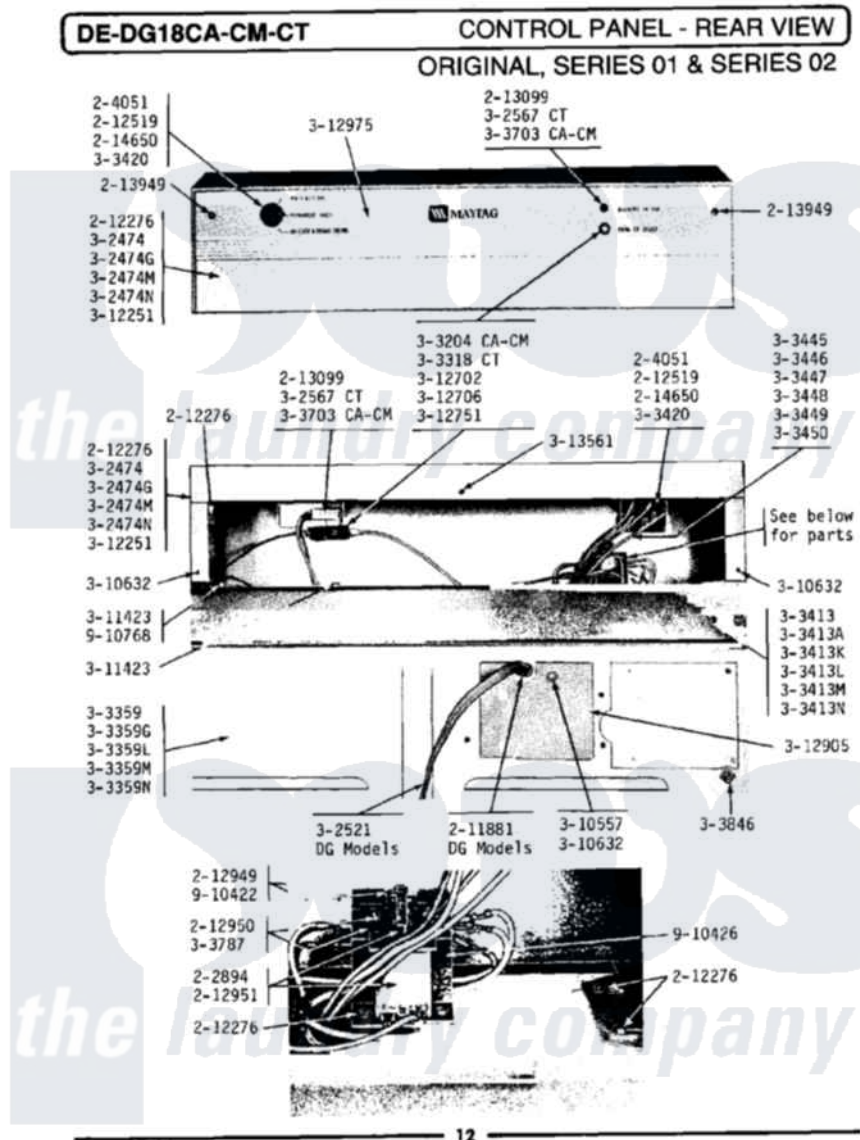

Maytag Residential Maytag GDE18CA Dryer Parts Parts Diagram 04 - CONTROL PANEL (SERIES 00)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	22204051		Knob
002	212276	W10116760		Screw
003	212519	488234		Screw 8-32 X 1/4
004	212949	22001866		Screw, Relay
005	212950	M0227520		Screw-Tc No.6-32 X 13/16", Preform SwiTch
006	212951			Screw, No.6-32 X 1/4 Inch
007	213099			Lens For Control Panel
008	213949			Screw, No.8-18 X 5/16 Inch
009	214650			Screw For 2-4051 Knob
NI	NLA		Not Available	CONTROL COVER-WHITE
"	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
012	Y303204			Start Switch With Nuts
NI	NLA		Not Available	CABINET-WHITE
"	NLA		Not Available	CABINET-ALMOND
"	NLA		Not Available	TOP COVER-WHITE

"	NLA		Not Available	TOP COVER-ALMOND
"	NLA		Not Available	TOP COVER-HARVEST WHEAT
018	Y303420		Not Available	SELECTOR SWITCH
NI	NLA		Not Available	MAIN WIRE HARNESS
020	Y303703			Pilot Light
NI	NLA		Not Available	SCREW & WASHER ASSY.
022	310557			Washer
023	Y310632	1163839		Screw
024	Y311423	489483		Screw 10-32 X 1/2
NI	NLA		Not Available	BACK FOR CONTROL PANEL
026	Y312702			Knurled Nut, Start Switch
027	Y312706	422617		Nut
028	312751			Lockwasher, Start Switch
029	Y312905		Not Available	COVER, TERMINAL
NI	NLA		Not Available	CONTROL PANEL
031	Y313561			Screw---NA
032	910768	M0280301		Tie Electr

