

# Maytag GDE18CM 04 - CONTROL PANEL-REAR VIEW

**No Document Available**

[Maytag Residential Maytag GDE18CM Dryer Parts Parts Diagram 04 - CONTROL PANEL-REAR VIEW](#)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	<a href="#">22204051</a>		Knob
002	212276	<a href="#">W10116760</a>		Screw
003	212519	<a href="#">488234</a>		Screw 8-32 X 1/4
004	212949	<a href="#">22001866</a>		Screw, Relay
005	212950	<a href="#">M0227520</a>		Screw-Tc No.6-32 X 13/16", Preform SwiTch
006	<a href="#">212951</a>			Screw, No.6-32 X 1/4 Inch
007	<a href="#">213099</a>			Lens For Control Panel
008	<a href="#">213949</a>			Screw, No.8-18 X 5/16 Inch
009	<a href="#">214650</a>			Screw For 2-4051 Knob
010	NLA		Not Available	CONTROL COVER-WHITE
011	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
012	<a href="#">Y303204</a>			Start Switch With Nuts
013	NLA		Not Available	CABINET-WHITE
014	NLA		Not Available	CABINET-ALMOND
015	NLA		Not Available	CABINET-HARVEST WHEAT

016	NLA		Not Available	TOP COVER-WHITE
017	NLA		Not Available	TOP COVER-ALMOND
018	NLA		Not Available	TOP COVER-HARVEST WHEAT
019	Y303420		Not Available	SELECTOR SWITCH
020	NLA		Not Available	MAIN WIRE HARNESS
021	<a href="#">Y303703</a>			Pilot Light
022	NLA		Not Available	SCREW & WASHER ASSY.
023	<a href="#">310557</a>			Washer
024	Y310632	<a href="#">1163839</a>		Screw
025	Y311423	<a href="#">489483</a>		Screw 10-32 X 1/2
026	NLA		Not Available	BACK FOR CONTROL PANEL
027	<a href="#">Y312702</a>			Knurled Nut, Start Switch
028	Y312706	<a href="#">422617</a>		Nut
029	<a href="#">312751</a>			Lockwasher, Start Switch
030	Y312905		Not Available	COVER, TERMINAL
031	NLA		Not Available	CONTROL PANEL
032	<a href="#">Y313561</a>			Screw---NA
033	910768	<a href="#">M0280301</a>		Tie Electr

