


# Maytag GDE18CM 05 - CONTROL PANEL (SERIES 03)

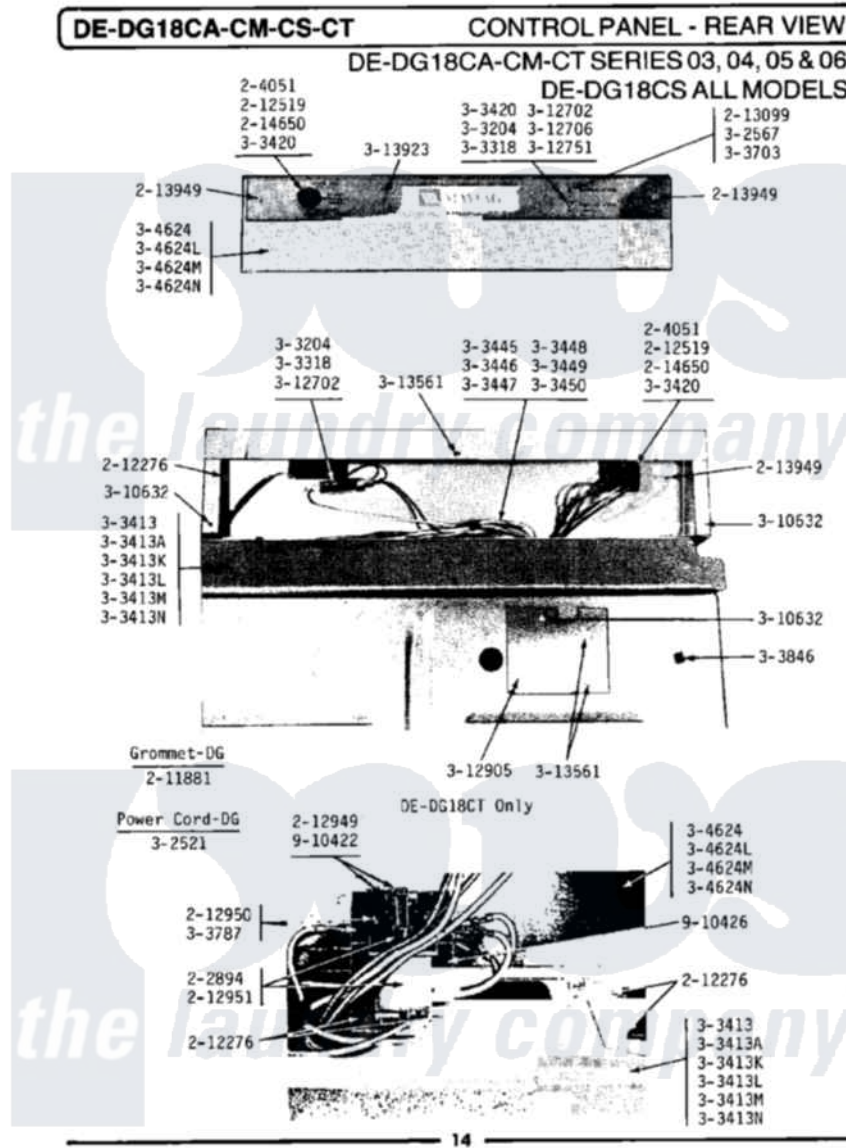

Maytag Residential Maytag GDE18CM Dryer Parts Parts Diagram 05 - CONTROL PANEL (SERIES 03)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	<a href="#">22204051</a>		Knob
002	212276	<a href="#">W10116760</a>		Screw
003	212519	<a href="#">488234</a>		Screw 8-32 X 1/4
004	212949	<a href="#">22001866</a>		Screw, Relay
005	212950	<a href="#">M0227520</a>		Screw-Tc No.6-32 X 13/16", Preform SwiTch
006	<a href="#">212951</a>			Screw, No.6-32 X 1/4 Inch
007	<a href="#">213099</a>			Lens For Control Panel
008	<a href="#">213949</a>			Screw, No.8-18 X 5/16 Inch
009	<a href="#">214650</a>			Screw For 2-4051 Knob
010	<a href="#">Y303204</a>			Start Switch With Nuts
NI	NLA		Not Available	TOP COVER-WHITE
"	NLA		Not Available	TOP COVER-ALMOND
"	NLA		Not Available	TOP COVER-HARVEST WHEAT
014	Y303420		Not Available	SELECTOR SWITCH
NI	NLA		Not Available	MAIN WIRE HARNESS

"	<a href="#">Y303703</a>		Pilot Light
"	NLA	Not Available	SCREW & WASHER ASSY.
"	NLA	Not Available	CONTROL COVER-WHITE
"	NLA	Not Available	CONTROL COVER-ALMOND
"	NLA	Not Available	CONTROL COVER-HARVEST WHEAT
021	Y310632	<a href="#">1163839</a>	Screw
022	Y311423	<a href="#">489483</a>	Screw 10-32 X 1/2
NI	NLA	Not Available	BACK FOR CONTROL PANEL
"	<a href="#">Y312702</a>		Knurled Nut, Start Switch
025	Y312706	<a href="#">422617</a>	Nut
NI	<a href="#">312751</a>		Lockwasher, Start Switch
"	Y312905	Not Available	COVER, TERMINAL
028	<a href="#">Y313561</a>		Screw---NA
NI	NLA	Not Available	CONTROL PANEL

