


# Maytag GDE210 04 - FRONT VIEW

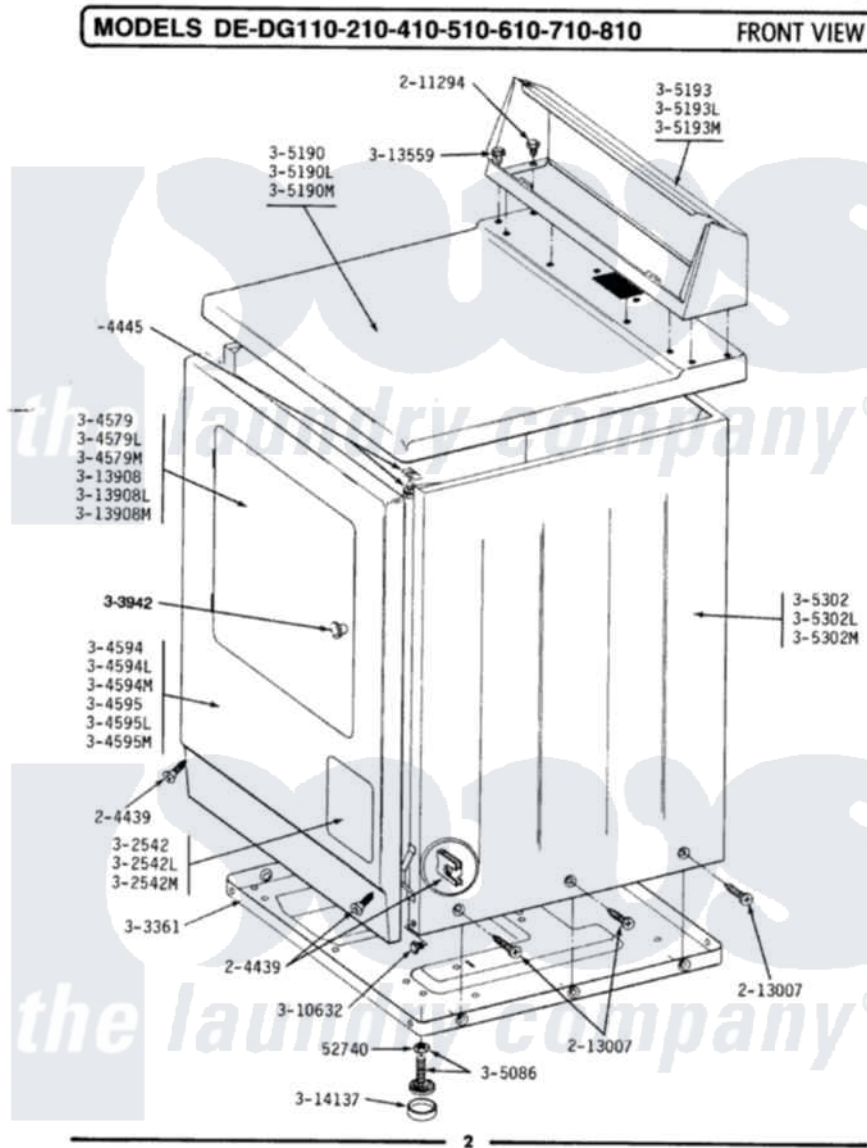

Maytag Residential Maytag GDE210 Dryer Parts Parts Diagram 04 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y052740	<a href="#">62739</a>		Nut, Lock
2	<a href="#">204439</a>			Screw And Fstner Assembly
3	<a href="#">204445</a>			Screw And Fastener Assembly
4	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	<a href="#">213007</a>			Xfor Cabinet See Cabinet, Back
6	302542		Not Available	PART NOT USED. (DG ONLY)
7	302542L		Not Available	PART NOT USED. (DG ONLY)
8	302542M		Not Available	ACCESS DOOR-HARVEST WHEAT
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
12	304579M		Not Available	DOOR-HARVEST WHEAT
13	<a href="#">304594</a>			Front Panel-White
14	304594L		Not Available	FRONT PANEL-ALMOND
15	304594M	<a href="#">3369903</a>		Dishrack
18	304595M		Not Available	FRONT PANEL-HARVEST

18	304953M	Not Available	WHEAT
19	<a href="#">Y305086</a>		Adjustable Leg And Nut
22	305190M	Not Available	TOP COVER-HARVEST WHEAT
25	305193M	Not Available	CONSOLE-HARVEST WHEAT
28	305302M	Not Available	CABINET-HARVEST WHEAT
29	303942	Not Available	KNOB AND SCREW
30	Y310632	<a href="#">1163839</a>	Screw
31	<a href="#">Y313559</a>		Screw
34	313908M	Not Available	DOOR PANEL-HARVEST WHEAT
35	<a href="#">Y314137</a>		Foot, Rubber

