


Maytag GDE24CA 02 - CA CONTROL PANEL

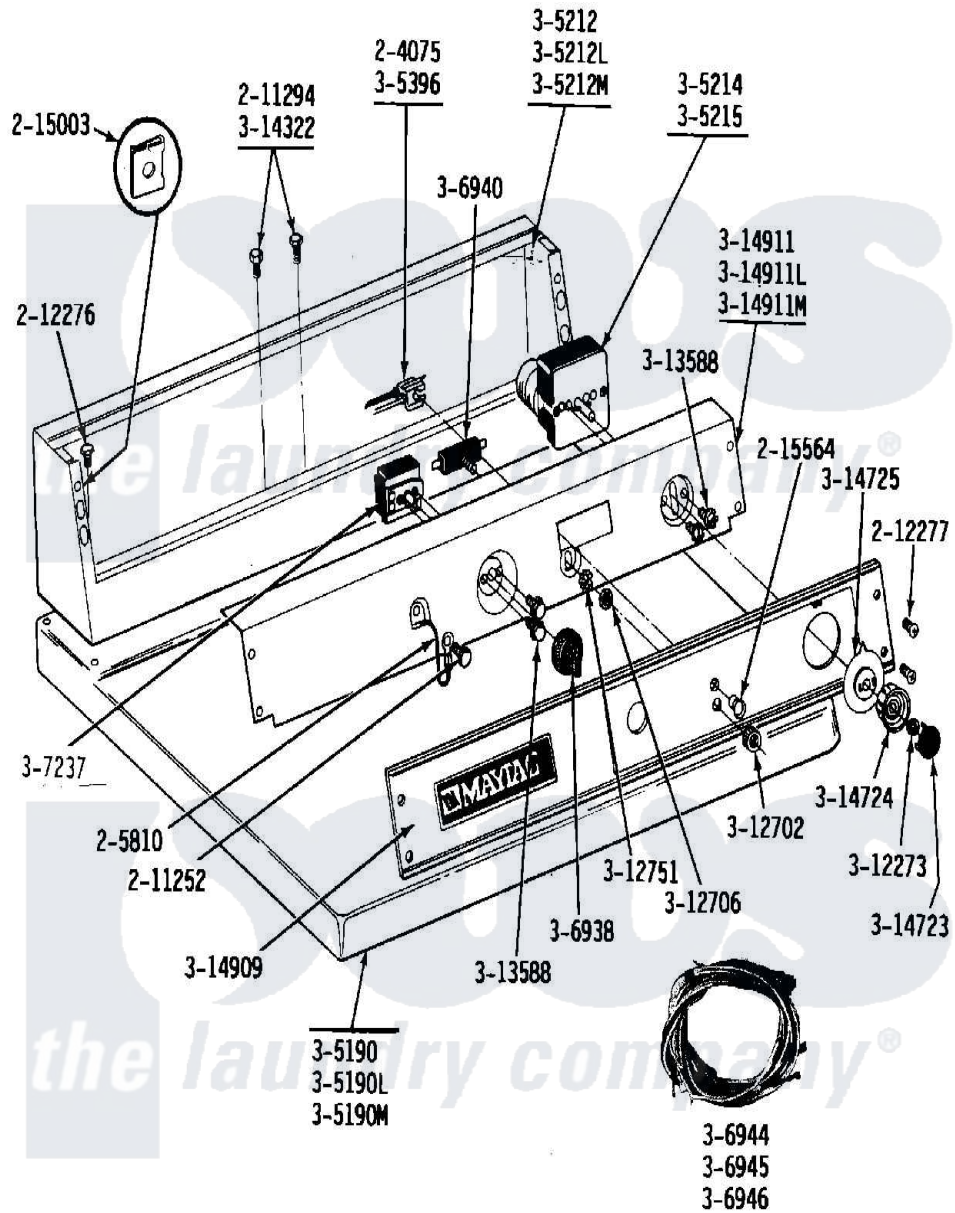

Maytag Residential Maytag GDE24CA Dryer Parts Parts Diagram 02 - CA CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204075		Not Available	PILOT LAMP (DG MODELS ONLY)
002	205810			Wire, Ground
003	211252			Screw, Ground Wire
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	212276	W10116760		Screw
006	212277			Screw, No.8 X 1/2 Inch
007	215003			Fastener, Panel And Bracket
008	215564			Lens, Indicator Light
009	Y305190	307104		Top Cover Assembly
NI	NLA		Not Available	TOP COVER-ALMOND
"	NLA		Not Available	TOP COVER-HARVEST WHEAT
"	NLA		Not Available	CONSOLE-WHITE
"	NLA		Not Available	CONSOLE-ALMOND
"	NLA		Not Available	CONSOLE-HARVEST WHEAT

015	305214		Timer
016	305215	305214	Timer
017	Y305396		Not Available LAMP, INDICATOR
018	306938		Knob, Selector Switch
019	307237	W10327105	Switch, Cycle Selection
020	306940	W10149462	Switch, Push-To-Start
NI	NLA		Not Available MAIN WIRE HARNESS - DE
"	NLA		Not Available MAIN WIRE HARNESS - DE
024	312273		Nut, Control Knob
025	Y312702		Knurled Nut, Start Switch
026	Y312706	422617	Nut
027	312751		Lockwasher, Start Switch
028	Y313588	488234	Screw 8-32 X 1/4
029	Y314322	211251	Screw, Transformer
030	314723	W10133501	Cap, Knob
031	314724		Knob For Timer
032	314725	33001500	Dial, Timer Indicator
033	314909	33001021	Panel, Control
NI	NLA		Not Available BACK-UP PLATE (WHITE)
"	NLA		Not Available BACK UP PLATE-ALMOND
"	NLA		Not Available BACK UP PLATE-HARVEST WHEAT

