


Maytag GDE312 01 - CONTROL PANEL

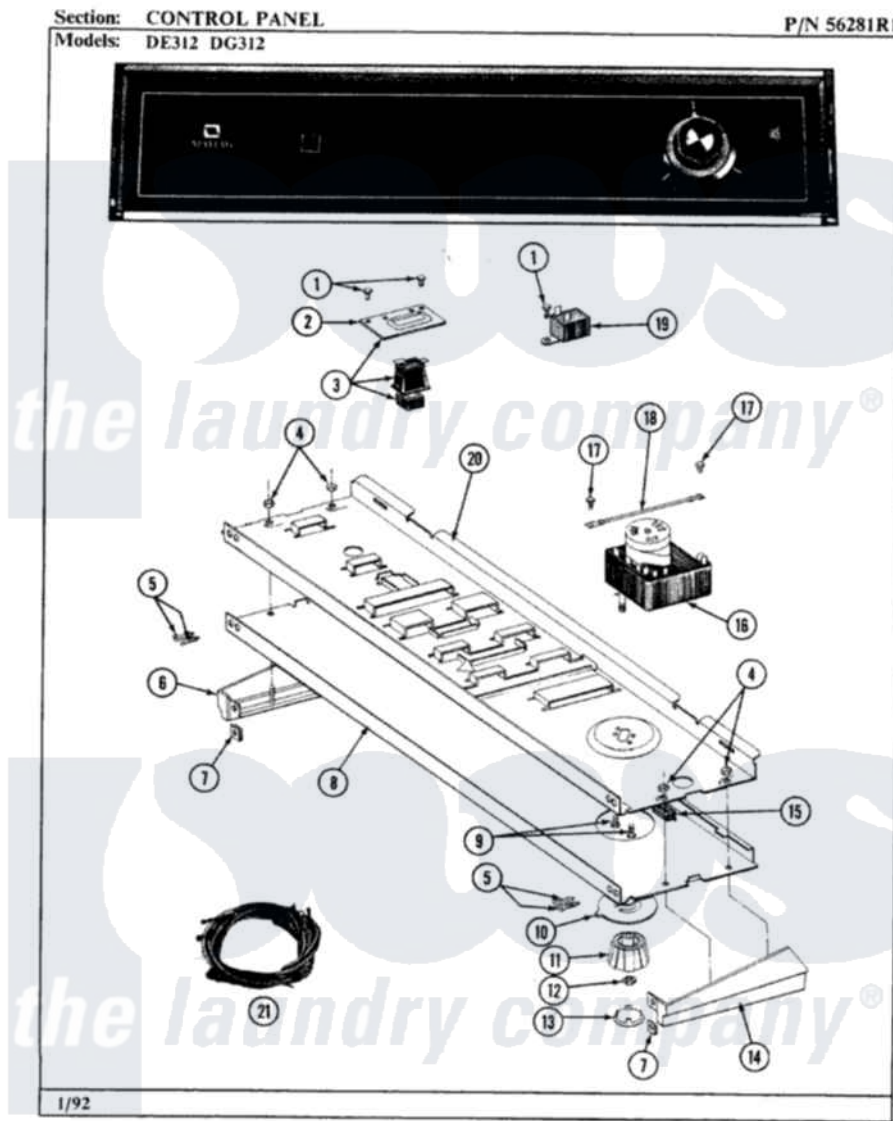

Maytag [Residential Maytag GDE312 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211168	W10139210		Screw, 8-18 X 5/16
2	314177		Not Available	BRACKET FOR START SWITCH
3	306533			Switch, Push/To/Start W/Bkt
4	214872			Palnut, End Cap Note: Nut, Lamp Holder
5	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
6	214815			End Cap F/Control Panel-LH
7	214894			Fastener, End Cap
8	Y306381		Not Available	CONTROL PANEL
9	910708	488234		Screw 8-32 X 1/4
10	314422	33001500		Dial, Timer Indicator
11	314421			Knob For Timer
12	312273			Nut, Control Knob
13	215164		Not Available	CAP FOR KNOB
14	214816			End Cap F/Control Panel-RH

15	214897		Pad, Control Panel
16	305973		Timer
17	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	204807		Ground Wire, Supp. Plte To Top Cover
19	305205	694419	Mini-Buzzer
20	314184		Back Up Plate
21	305782	Not Available	WIRE HARNESS - CANADA
"	306814	Not Available	WIRE HARNESS
"	306820	Not Available	WIRE HARNESS
"	305780	Not Available	WIRE HARNESS

Howes
the laundry company®

Howes
the laundry company®

Howes
the laundry company®