


Maytag GDE412 01 - CONTROL PANEL

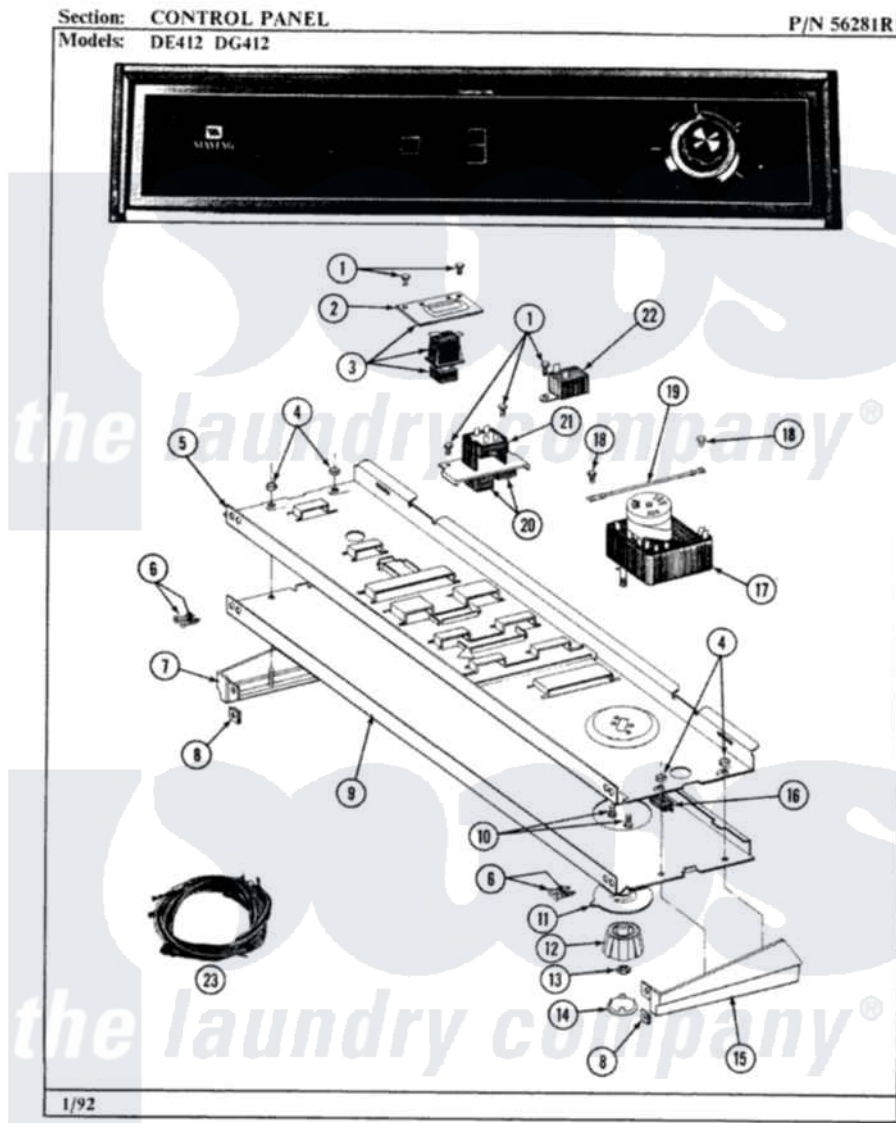

10

Maytag [Residential Maytag GDE412 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211168	W10139210		Screw, 8-18 X 5/16
2	314177		Not Available	BRACKET FOR START SWITCH
3	306533			Switch, Push/To/Start W/Bkt
4	214872			Palnut, End Cap Note: Nut, Lamp Holder
5	314184			Back Up Plate
6	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
7	214815			End Cap F/Control Panel-LH
8	214894			Fastener, End Cap
9	305882		Not Available	CONTROL PANEL
"	306382		Not Available	CONTROL PANEL
10	910708	488234		Screw 8-32 X 1/4
11	314422	33001500		Dial, Timer Indicator
12	314421			Knob For Timer
13	312273			Nut, Control Knob

14	215164		Not Available	CAP FOR KNOB
15	214816			End Cap F/Control Panel-RH
16	214897			Pad, Control Panel
17	305448			Timer
18	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
19	204807			Ground Wire, Supp. Plte To Top Cover
20	215210			Button For Switch
21	305963			Temperature Switch
22	305205	694419		Mini-Buzzer
23	Y306607		Not Available	MAIN WIRE HARNESS
"	306879		Not Available	WIRE HARNESS, MAIN
"	305341			Main Wire Harness

the laundry company[®]

the laundry company[®]

the laundry company[®]