


Maytag GDE482 01 - CONTROL PANEL

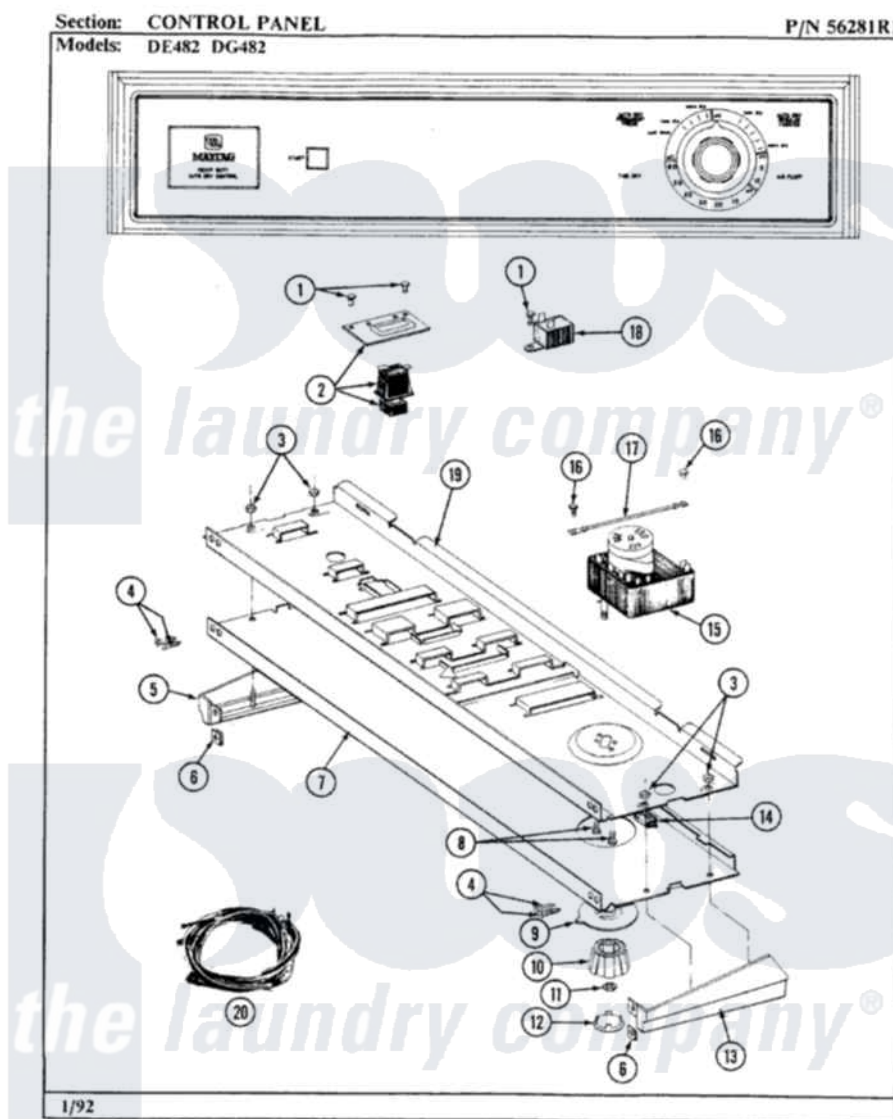

Maytag [Residential Maytag GDE482 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211168	W10139210		Screw, 8-18 X 5/16
2	306533			Switch, Push/To/Start W/Bkt
3	214872			Palnut, End Cap Note: Nut, Lamp Holder
4	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
5	214815			End Cap F/Control Panel-LH
6	214894			Fastener, End Cap
7	306383	4391990		Switch-Inf
8	910708	488234		Screw 8-32 X 1/4
9	314422	33001500		Dial, Timer Indicator
10	314421			Knob For Timer
11	312273			Nut, Control Knob
12	215163		Not Available	CAP FOR KNOB
13	214816			End Cap F/Control Panel-RH
14	214897			Pad, Control Panel
15	305448			Timer

16	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
17	204807		Ground Wire, Supp. Plte To Top Cover
18	305205	694419	Mini-Buzzer
19	314184		Back Up Plate
20	305782	Not Available	WIRE HARNESS - CANADA
"	306814	Not Available	WIRE HARNESS
"	306820	Not Available	WIRE HARNESS
"	305780	Not Available	WIRE HARNESS

