

Maytag GDE482 03 - FRONT VIEW



26

Maytag Residential Maytag GDE482 Dryer Parts Parts Diagram 03 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211194		Not Available	LOCK WASHER
2	Y313559			Screw
3	307104M		Not Available	TOP COVER ASSY
4	306668M		Not Available	DOOR, HARVEST WHEAT
5	303942		Not Available	KNOB AND SCREW
6	304595M		Not Available	FRONT PANEL-HARVEST WHEAT
7	204439			Screw And Fstner Assembly
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
10	Y310632	1163839		Screw
11	Y052740	62739		Nut, Lock
12	Y305086			Adjustable Leg And Nut
13	Y314137			Foot, Rubber
14	213007			Xfor Cabinet See Cabinet, Back
15	305302M		Not Available	CABINET-HARVEST WHEAT

