


# Maytag GDE610 01 - CONTROL PANEL

**MODEL DE-DG610 CONTROL PANEL**

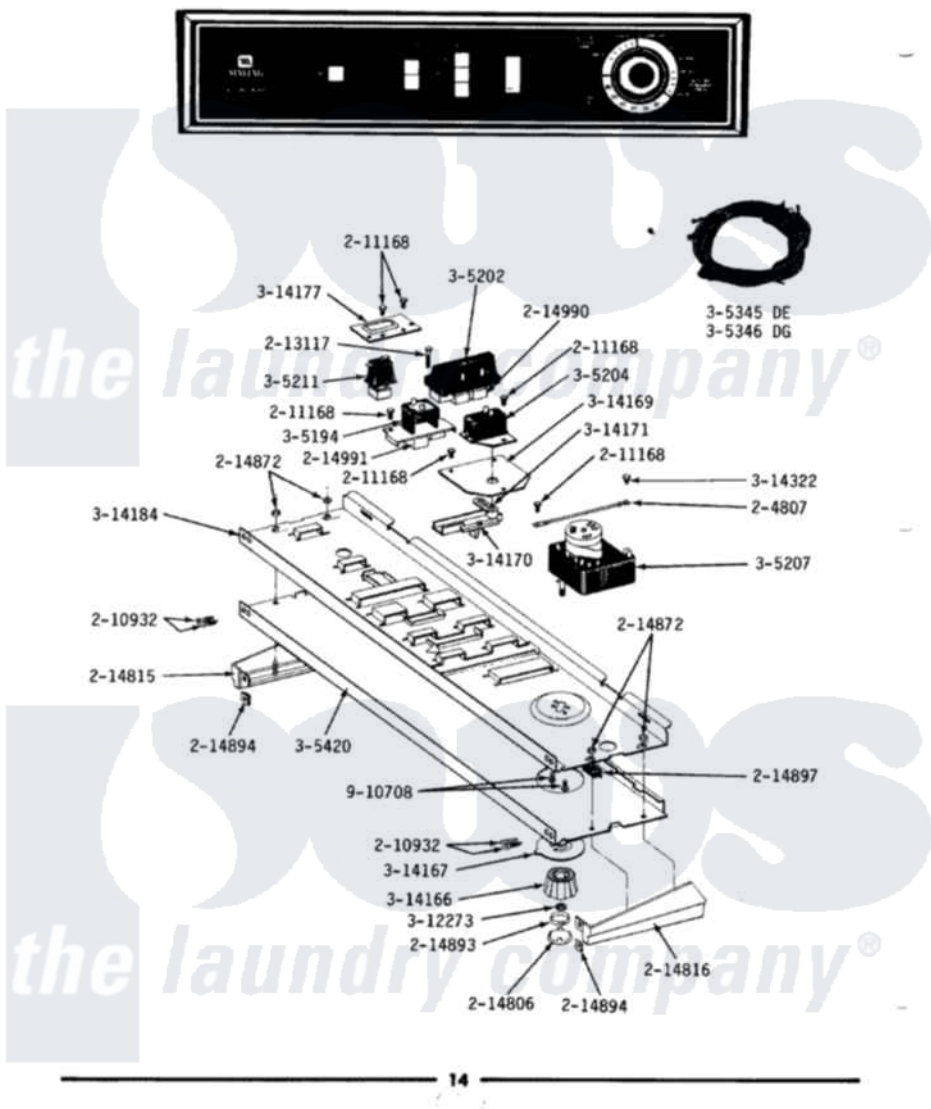

Maytag [Residential Maytag GDE610 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">204807</a>			Ground Wire, Supp. Plte To Top Cover
2	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
4	213117	<a href="#">67006908</a>		Screw, Ice Rack
5	214806		Not Available	CAP FOR TIMER KNOB
6	<a href="#">214815</a>			End Cap F/Control Panel-LH
7	<a href="#">214816</a>			End Cap F/Control Panel-RH
8	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
9	214893		Not Available	DETENT RING F/TIMER KNOB CA
10	<a href="#">214894</a>			Fastener, End Cap
11	<a href="#">214897</a>			Pad, Control Panel
12	<a href="#">214990</a>			Button For Switch
13	<a href="#">214991</a>			Button For Switch
14	305104		Not Available	DRYNESS OR PRESS CARE

14	<a href="#">305194</a>	Not Available	SWITCH
15	305202	Not Available	TEMPERATURE SELECTOR SWITCH
16	Y305204	Not Available	BUZZER - ADJUSTABLE
17	<a href="#">305207</a>		Timer
18	<a href="#">305211</a>		Push To Start Switch
19	305345	Not Available	MAIN WIRE HARNESS
20	305346	Not Available	MAIN WIRE HARNESS
21	<a href="#">305420</a>		Control Panel
22	<a href="#">312273</a>		Nut, Control Knob
23	<a href="#">Y314166</a>		Knob For Timer
24	314167	Not Available	TIMER DIAL INDICATOR
25	314169	<a href="#">313610</a>	Hndle-Door
26	314170	<a href="#">31-4170</a>	Tech Sheet
27	314171	Not Available	PIVOT ARM FOR BUZZER
28	314177	Not Available	BRACKET FOR START SWITCH
29	<a href="#">314184</a>		Back Up Plate
30	Y314322	<a href="#">211251</a>	Screw, Transformer
31	910708	<a href="#">488234</a>	Screw 8-32 X 1/4

