


Maytag GDE710 03 - FRONT VIEW

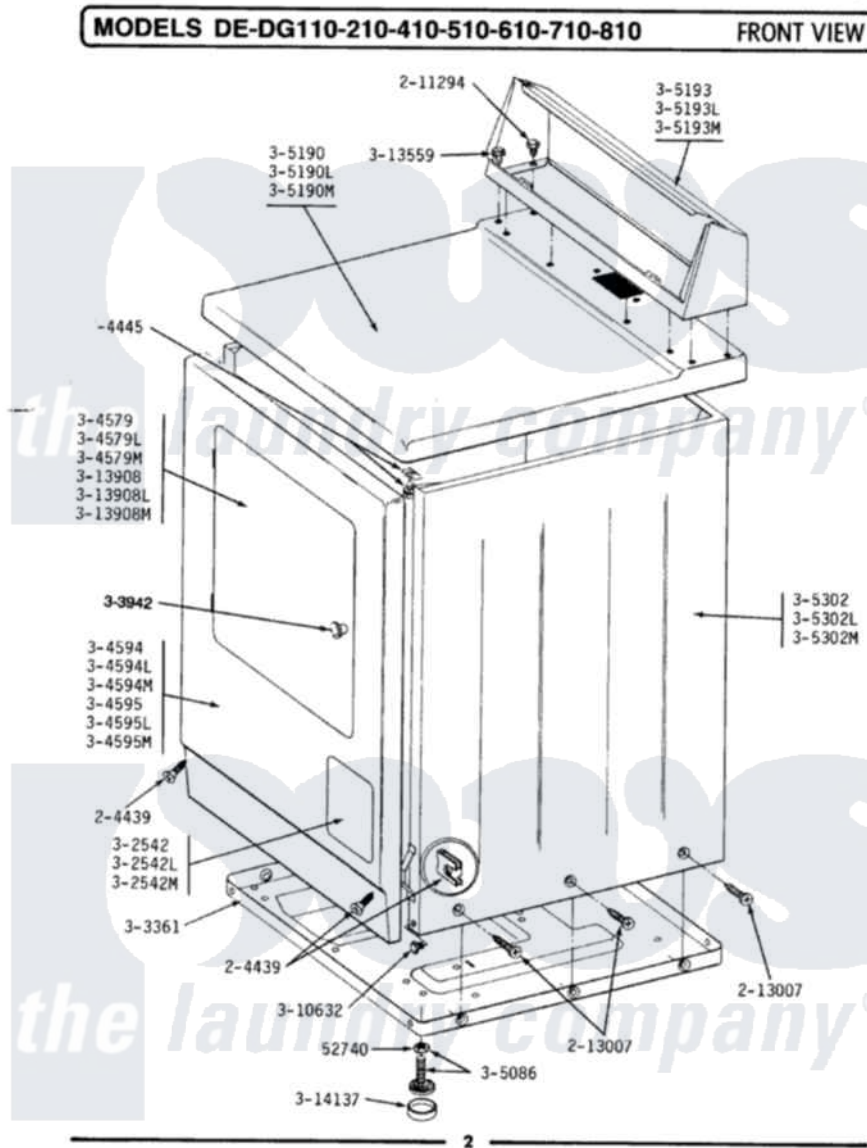

Maytag Residential Maytag GDE710 Dryer Parts Parts Diagram 03 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	204439			Screw And Fstner Assembly
3	204445			Screw And Fastener Assembly
4	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	213007			Xfor Cabinet See Cabinet, Back
6	302542		Not Available	PART NOT USED. (DG ONLY)
7	302542L		Not Available	PART NOT USED. (DG ONLY)
8	302542M		Not Available	ACCESS DOOR-HARVEST WHEAT
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
12	304579M		Not Available	DOOR-HARVEST WHEAT
13	304594			Front Panel-White
14	304594L		Not Available	FRONT PANEL-ALMOND
15	304594M	3369903		Dishrack
18	304595M		Not Available	FRONT PANEL-HARVEST WHEAT

19	Y305086		Adjustable Leg And Nut
22	305190M	Not Available	TOP COVER-HARVEST WHEAT
25	305193M	Not Available	CONSOLE-HARVEST WHEAT
28	305302M	Not Available	CABINET-HARVEST WHEAT
29	303942	Not Available	KNOB AND SCREW
30	Y310632	1163839	Screw
31	Y313559		Screw
34	313908M	Not Available	DOOR PANEL-HARVEST WHEAT
35	Y314137		Foot, Rubber

