


# Maytag GDE712 01 - CONTROL PANEL

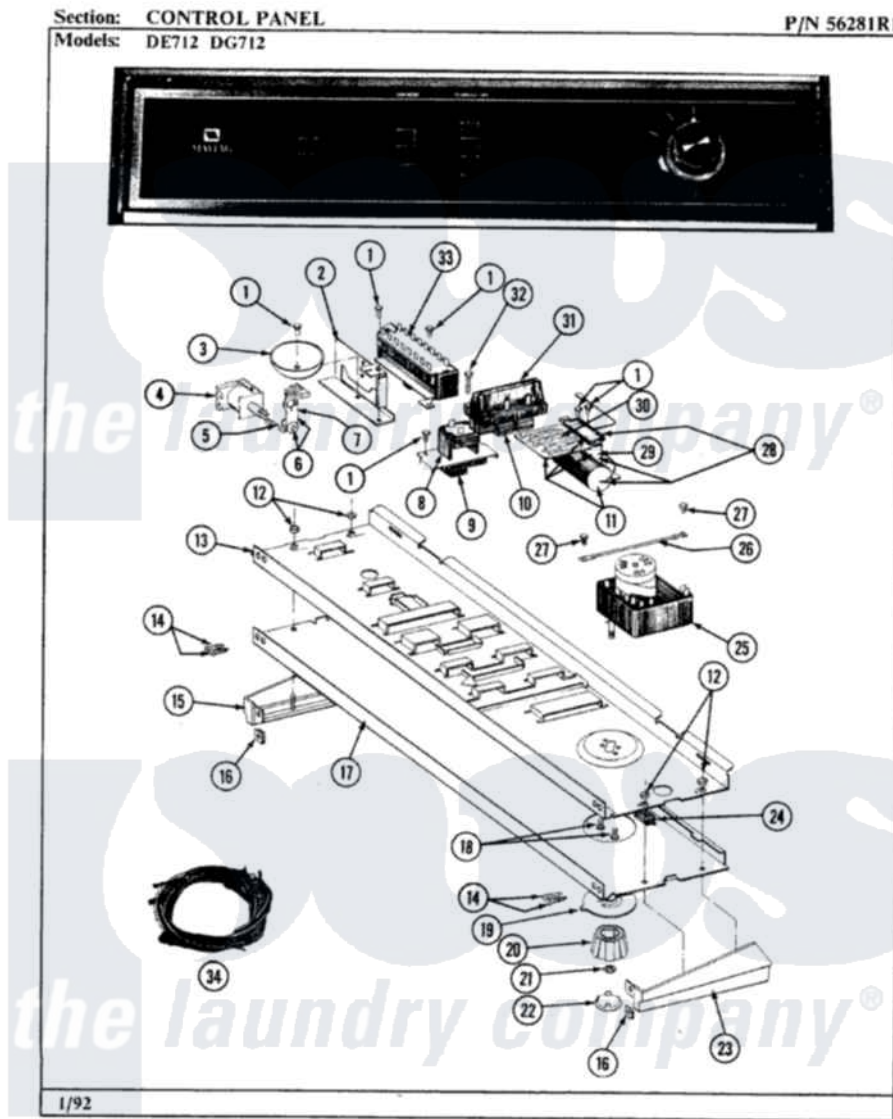

20

Maytag [Residential Maytag GDE712 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
2	314165		Not Available	CHIME AND SOLENOID BRACKET
3	<a href="#">Y311660</a>			Chime
4	Y303350		Not Available	SOLENOID
5	Y312260		Not Available	LINK
6	Y303771		Not Available	CHIME ACTUATOR ASSEMBLY
7	<a href="#">Y313321</a>			Chime Actuator
8	305950		Not Available	DRYNESS-PRESS CARE SWITCH
9	<a href="#">215210</a>			Button For Switch
10	<a href="#">215211</a>			Button For Switch
11	306042		Not Available	ELECTRONIC CONTROL
12	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
13	<a href="#">314184</a>			Back Up Plate
14	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note:

14	<a href="#">210932</a>		Screw, Inlet Duct
15	<a href="#">214815</a>		End Cap F/Control Panel-LH
16	<a href="#">214894</a>		Fastener, End Cap
17	<a href="#">306386</a>		Control Panel
"	305886	Not Available	CONTROL PANEL
18	910708	<a href="#">488234</a>	Screw 8-32 X 1/4
19	314422	<a href="#">33001500</a>	Dial, Timer Indicator
20	<a href="#">314421</a>		Knob For Timer
21	<a href="#">312273</a>		Nut, Control Knob
22	215164	Not Available	CAP FOR KNOB
23	<a href="#">214816</a>		End Cap F/Control Panel-RH
24	<a href="#">214897</a>		Pad, Control Panel
25	<a href="#">306039</a>		Timer RPR
26	<a href="#">204807</a>		Ground Wire, Supp. Plte To Top Cover
27	211294	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
28	<a href="#">306043</a>		Edgeboard Connector Assembl
29	314168	<a href="#">313611</a>	Button-DR
30	Y305392	Not Available	PRINTED CIRCUIT BOARD
31	305946	Not Available	TEMPERATURE SWITCH
32	213117	<a href="#">67006908</a>	Screw, Ice Rack
33	<a href="#">215211</a>		Button For Switch
"	Y305945	Not Available	CONTROL SWITCH
34	305947	Not Available	WIRE HARNESS
"	305978	Not Available	WIRE HARNESS-CANADA

