


Maytag GDE9700 01 - CONTROL PANEL

SECTION: CONTROL PANEL
MODEL: DE-D69700

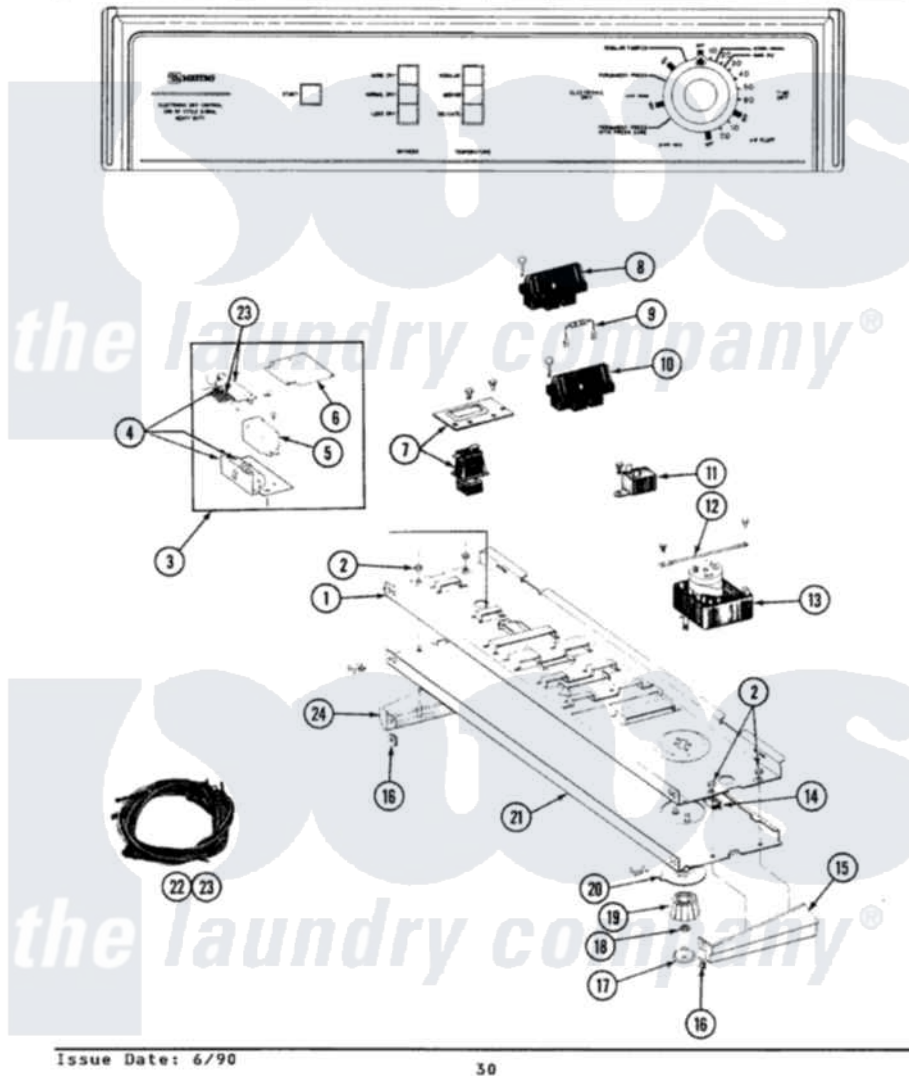

Issue Date: 6/90

30

[Maytag Residential Maytag GDE9700 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	314184			Back Up Plate
2	214872			Palnut, End Cap Note: Nut, Lamp Holder
3	211168	W10139210		Screw, 8-18 X 5/16
"	307898		Not Available	ELECTRONIC CONTROL
4	311863		Not Available	SCREW FOR CAUTION PLATE---NA
"	307897			Edge Board Connector
5	307899			Relay
"	Y251119	3177991		Screw
6	Y307896			Pc Board
7	211168	W10139210		Screw, 8-18 X 5/16
"	307305			Switch Push To Start
8	213117	67006908		Screw, Ice Rack
"	307304		Not Available	TEMP CONTROL SWITCH 3 BUTTON
9	306916			Resistor, Med Temp Elec

10	307304		Not Available	TEMP CONTROL SWITCH 3 BUTTON
"	213117	67006908		Screw, Ice Rack
11	305205	694419		Mini-Buzzer
"	213117	67006908		Screw, Ice Rack
12	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	204807			Ground Wire, Supp. Plte To Top Cover
13	910708	488234		Screw 8-32 X 1/4
"	Y307404			Timer
14	214897			Pad, Control Panel
15	207216		Not Available	END CAP RH
"	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
16	214894			Fastener, End Cap
17	215821		Not Available	CAP, KNOB
18	312273			Nut, Control Knob
19	315041			Knob, Timer
20	315042			Dial Skirt
21	307320		Not Available	CONTROL PANEL
22	307263		Not Available	WIRE HARNESS
"	307260		Not Available	WIRE HARNESS
23	307422		Not Available	WIRE HARNESS
24	307215	WB62X1699		Cooktopbrushed Chrome

the laundry company[®]

the laundry company[®]