


Maytag GDG19CD 03 - REAR VIEW

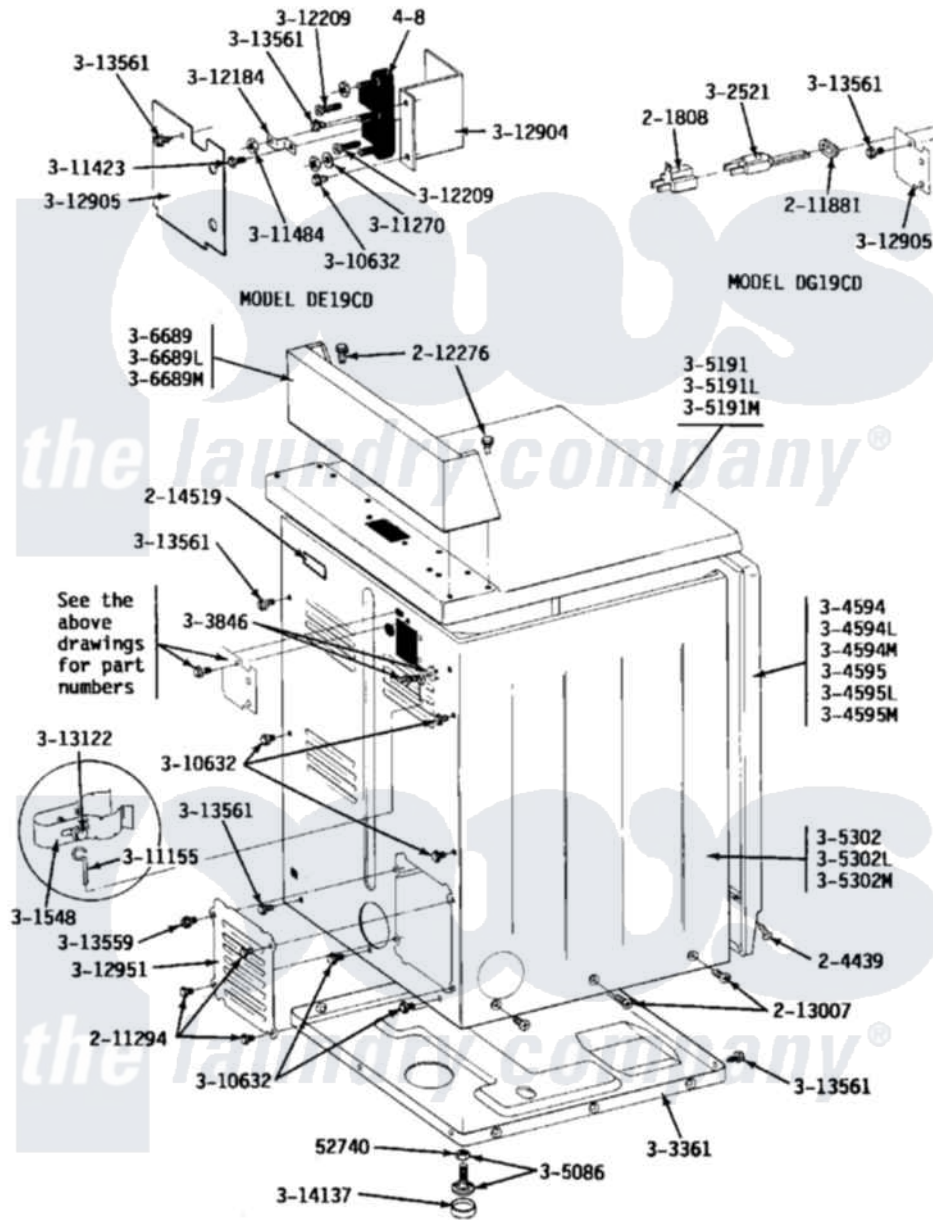

Maytag Residential Maytag GDG19CD Dryer Parts Parts Diagram 03 - REAR VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	Y201808			Converter
003	204439			Screw And Fstner Assembly
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	211881			Grommet, Cord Part Not Used-Gas Models Only
006	212276	W10116760		Screw
007	213007			Xfor Cabinet See Cabinet, Back
008	214519			LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
009	301548			Clamp, Ground Wire
010	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
011	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
NI	NLA		Not Available	SCREW & WASHER ASSY.

"	NLA	Not Available	FRONT PANEL-WHITE
"	NLA	Not Available	FRONT PANEL-ALMOND
"	NLA	Not Available	FRONT PANEL-HARVEST WHEAT
019	Y305086		Adjustable Leg And Nut
020	Y305191	Not Available	TOP COVER-WHITE
NI	NLA	Not Available	TOP COVER-ALMOND
"	NLA	Not Available	TOP COVER-HARVEST WHEAT
"	NLA	Not Available	CABINET-WHITE
"	NLA	Not Available	CABINET-ALMOND
"	NLA	Not Available	CABINET-HARVEST WHEAT
"	NLA	Not Available	CONTROL COVER (WHT)
"	NLA	Not Available	CONTROL COVER ASSY---NA
"	NLA	Not Available	CONTROL COVER ASSY
030	311155		Ground Wire And Clamp
037	Y312905	Not Available	COVER, TERMINAL
038	Y312951	Not Available	ACCESS COVER, BACK
039	313122		Screw - Baffle To Tumbler
040	Y313559		Screw
042	Y314137		Foot, Rubber

