


Maytag GDG26CS 06 - FRONT PANEL & DOOR ASSEMBLY

MODEL DE-DG26CS FRONT PANEL & DOOR ASSEMBLY

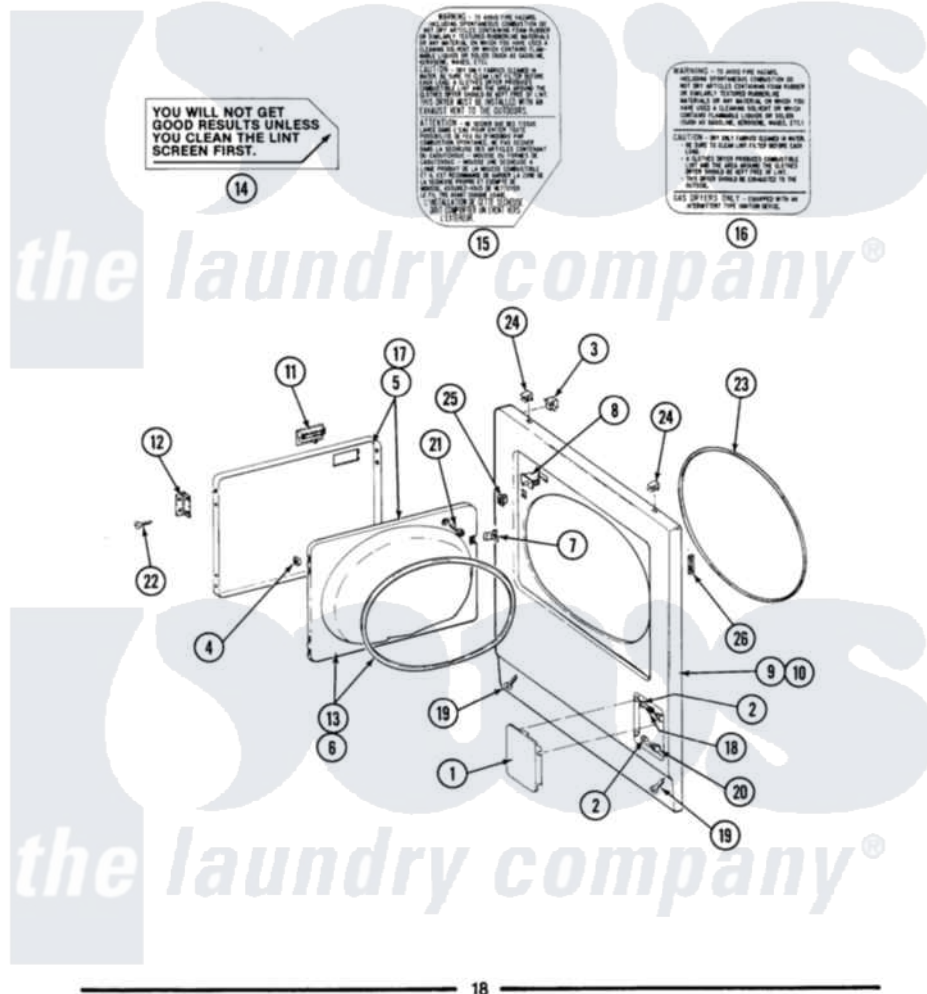

Maytag Residential Maytag GDG26CS Dryer Parts Parts Diagram 06 - FRONT PANEL & DOOR ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	ACCESS DOOR (WHT)
002	NLA		Not Available	BUSHING, ACCESS DOOR
003	Y310376			Clip, Door Switch Harness
004	Y313910			Clip, Door Liner To Outer Panel
005	NLA		Not Available	(ALM)
"	Y307111		Not Available	DOOR ASSY. COMPLETE (WHT)
006	314935	33001192		Seal, Door
007	314936	33001305		Strike, Door
"	314944	33001305		Strike, Door
008	Y305753	W10169313		Switch-Door
009	NLA		Not Available	PART NOT USED
010	307998L			Front Panel---NA
"	NLA		Not Available	FRONT PANEL ASSY. (WHT)
011	314946			Handle White
"	314972			Handle Door ALM

"	NLA	Not Available	(H. WHEAT)
012	307099	33001230	Hinge, Door
013	307098	Not Available	DOOR, INNER (W/SEAL)
014	Y313340		LABEL, LINT SCREEN INSTRUCTION
015	314941	Not Available	LABEL, INSTRUCTION
016	NLA	Not Available	INSTRUCTION LABEL
017	314966		Panel, Outer
"	NLA	Not Available	(ALM)
018	312369		Sleeve, Access Panel Stud Part Not Used
019	204439		Screw And Fstner Assembly
020	212949	22001866	Screw, Relay
021	312960	489355	Screw, 8 X 1/2
022	Y314062		Screw, Door Hinge And Panel
023	314937		Seal, Front Panel
024	212982	22001650	Fastener, Spring
025	306436		Door Latch Kit--W
026	Y313907		Fastener, Twin

