


Maytag GDG27CA 04 - FRONT PANEL & DOOR ASSEMBLY

SECTION: FRONT PANEL & DOOR ASSEMBLY
 MODEL: DE-DG27CA

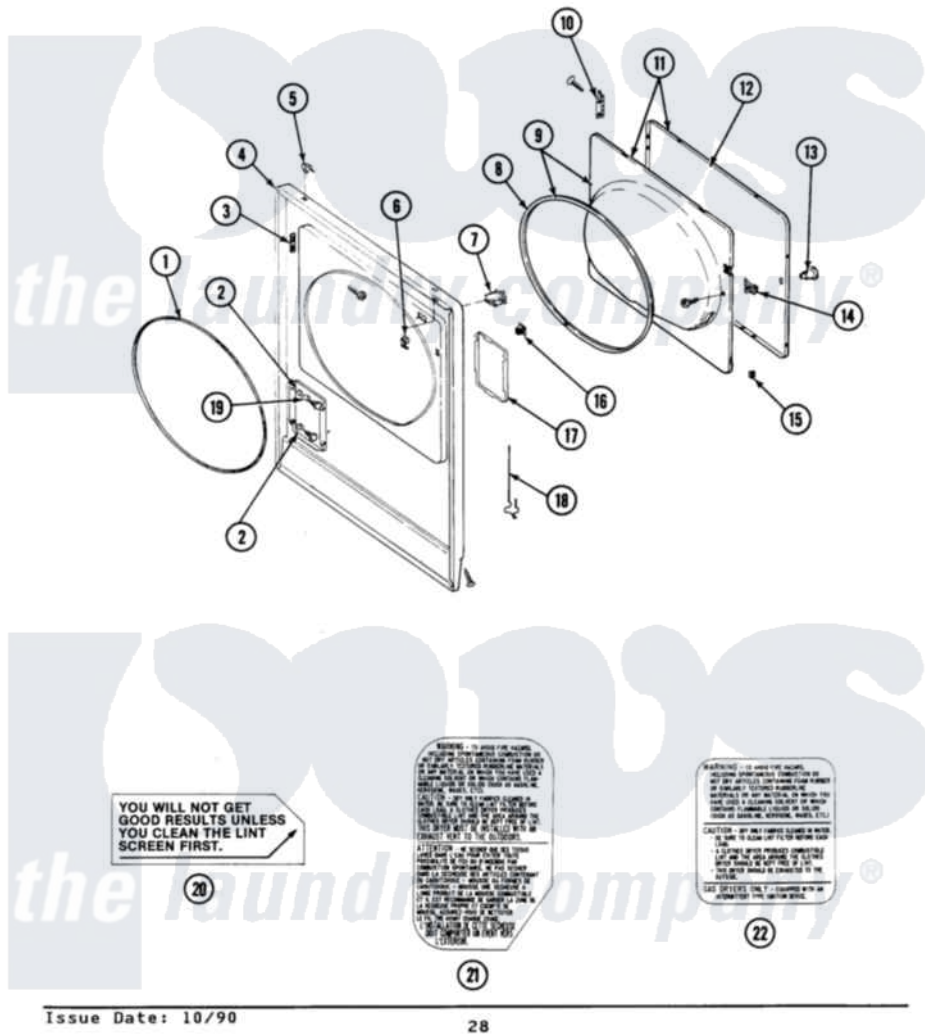

Issue Date: 10/90

Maytag [Residential Maytag GDG27CA Dryer Parts](#) Parts Diagram 04 - FRONT PANEL & DOOR ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	314937			Seal, Front Panel
002	NLA		Not Available	BUSHING
003	Y313907			Fastener, Twin
004	212949	22001866		Screw, Relay
"	NLA		Not Available	FRONT PANEL-WHITE
005	212982	22001650		Fastener, Spring
006	Y310376			Clip, Door Switch Harness
007	Y305753	W10169313		Switch-Dor
008	314935	33001192		Seal, Door
009	Y308070		Not Available	INNER DOOR W/GASKET
010	Y314062			Screw, Door Hinge And Panel
011	308062			Door Assembly Complete W/O Hinges
012	NLA		Not Available	DOOR OUTER HALF WHITE
013	NLA		Not Available	KNOB AND SCREW
014	314936	33001305		Strike, Door
"	314944	33001305		Strike, Door

015	Y313910		Clip, Door Liner To Outer Panel
016	306436		Door Latch Kit--W
017	NLA	Not Available	ACCESS DOOR (WHITE)
018	Y314025		Latch For Access Door
019	312369		Sleeve, Access Panel Stud Part Not Used
020	Y313340		LABEL, LINT SCREEN INSTRUCTION
021	314941	Not Available	LABEL, INSTRUCTION
022	NLA	Not Available	INSTRUCTION LABEL

