


# Maytag GDG27CS 05 - FRONT VIEW

SECTION: FRONT VIEW  
MODEL: DE-DG27CS-CT

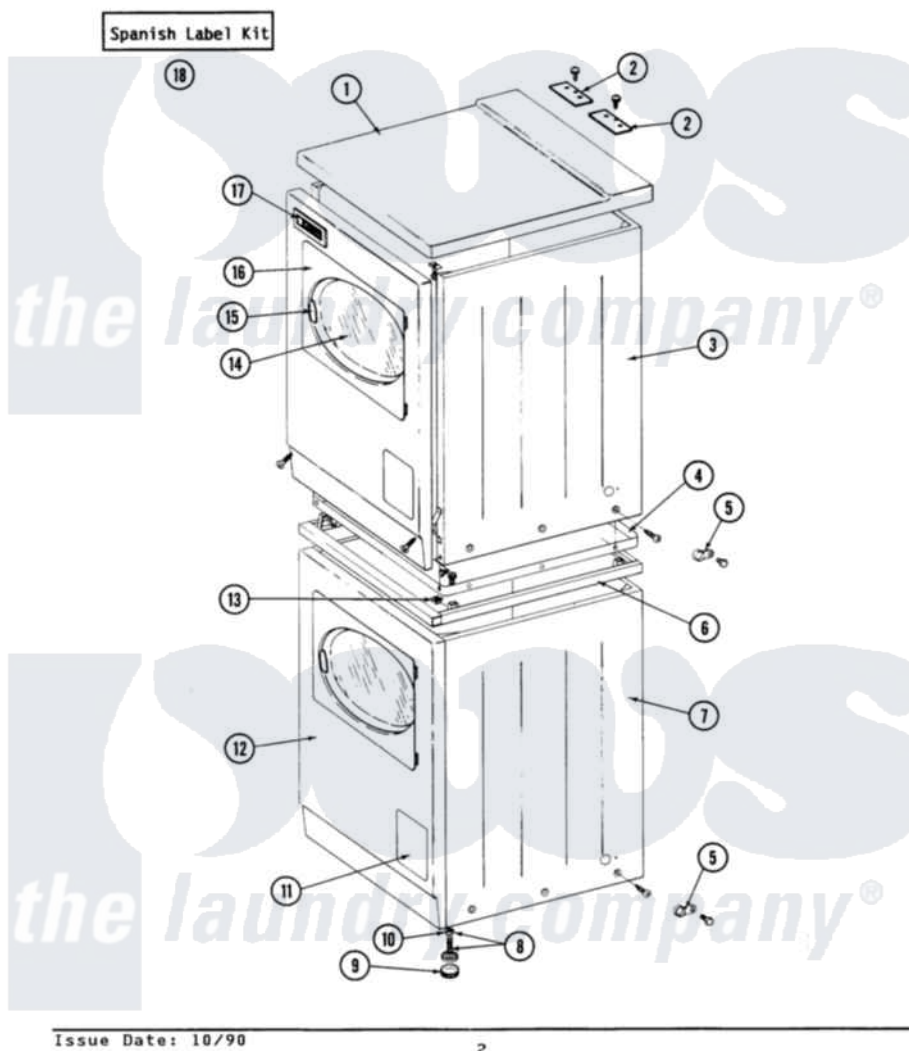

Issue Date: 10/90

2

Maytag Residential Maytag GDG27CS Dryer Parts Parts Diagram 05 - FRONT VIEW  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">307104</a>			Top Cover Assembly
"	NLA		Not Available	TOP COVER ASSY
002	NLA		Not Available	COVER PLATE
"	<a href="#">Y313559</a>			Screw
003	<a href="#">204445</a>			Screw And Fastener Assembly
"	<a href="#">213007</a>			Xfor Cabinet See Cabinet, Back
"	NLA		Not Available	CABINET, UPPER (WHITE)
004	314663	<a href="#">214354</a>		Screw, Top Cover To Cabnt.
"	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
005	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
"	910768	<a href="#">M0280301</a>		Tie Electr
006	NLA		Not Available	SPACER ASSM-WHITE
007	307125		Not Available	CABINET, LOWER (WHITE)
"	NLA		Not Available	CABINET, LOWER (ALMOND)
008	Y302699	<a href="#">22003428</a>		Leg, Adjustable

009	<a href="#">210684</a>		Foot, Adjustable Leg
010	<a href="#">210385</a>		Lock Nut For Adjustable Leg
011	NLA	Not Available	ACCESS DOOR (WHITE)
012	<a href="#">204439</a>		Screw And Fstner Assembly
"	<a href="#">307998L</a>		Front Panel----NA
"	NLA	Not Available	FRONT PANEL-WHITE
013	310933	<a href="#">33002194</a>	Nut, Speed
014	308069	Not Available	DOOR, INNER W/GASKET
015	<a href="#">314939</a>		Handle, Door
"	<a href="#">314974</a>		Handle, Door
"	<a href="#">314975</a>		Handle, Door
016	NLA	Not Available	DOOR, COMPLETE LESS HINGES (WH
017	NLA	Not Available	NAME PLATE
018	NLA	Not Available	SPANISH LABEL KIT

