


Maytag GDG27CT 07 - FRONT PANEL & DOOR ASSEMBLY

SECTION: FRONT PANEL & DOOR ASSEMBLY
 MODEL: DE-DG27CS-CT

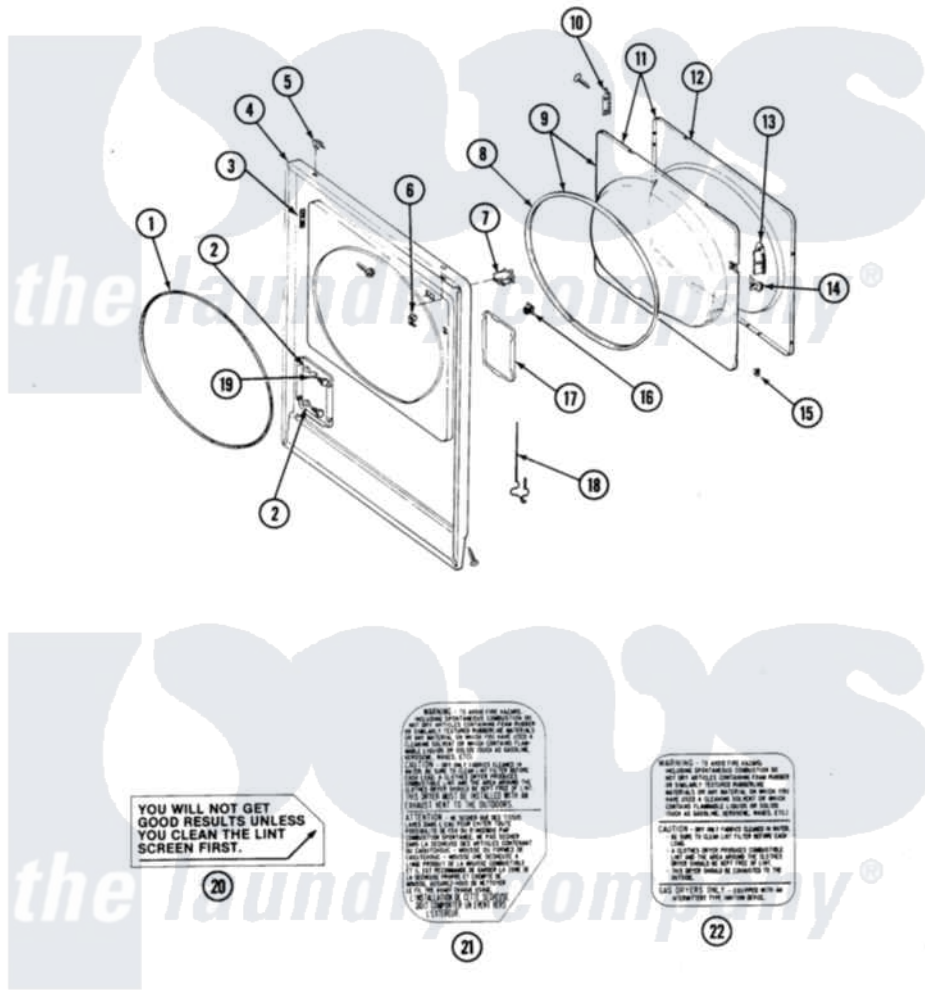

Issue Date: 10/90

Maytag Residential Maytag GDG27CT Dryer Parts Parts Diagram 07 - FRONT PANEL & DOOR ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	314937			Seal, Front Panel
002	NLA		Not Available	BUSHING
003	Y313907			Fastener, Twin
004	204439			Screw And Fstner Assembly
"	212949	22001866		Screw, Relay
"	307998L			Front Panel----NA
"	NLA		Not Available	FRONT PANEL (WHT)
005	212982	22001650		Fastener, Spring
006	Y310376			Clip, Door Switch Harness
007	Y305754	W10169313		Switch-Dor
008	314935	33001192		Seal, Door
009	308069		Not Available	DOOR, INNER W/GASKET
010	307099	33001230		Hinge, Door
"	Y314062			Screw, Door Hinge And Panel
011	NLA		Not Available	DOOR, COMPLETE LESS HINGES (WH
				DOOR W/WINDOW OUTER

012	314967		Not Available	DOOR W/WINDOW OUTER HALF (WHT)
"	NLA		Not Available	DOOR W/WIN CUT OUT OUTER ALMNA
013	314939			Handle, Door
"	314974			Handle, Door
"	314975			Handle, Door
014	314936	33001305		Strike, Door
"	314944	33001305		Strike, Door
015	Y313910			Clip, Door Liner To Outer Panel
016	306436			Door Latch Kit--W
017	NLA		Not Available	ACCESS DOOR (WHT)
018	Y314025			Latch For Access Door
019	312369			Sleeve, Access Panel Stud Part Not Used
020	Y313340			LABEL, LINT SCREEN INSTRUCTION
021	314941		Not Available	LABEL, INSTRUCTION
022	NLA		Not Available	INSTRUCTION LABEL

