


Maytag GDG31CT 03 - TIMER ACCUMULATORS & TICKET CONTROL

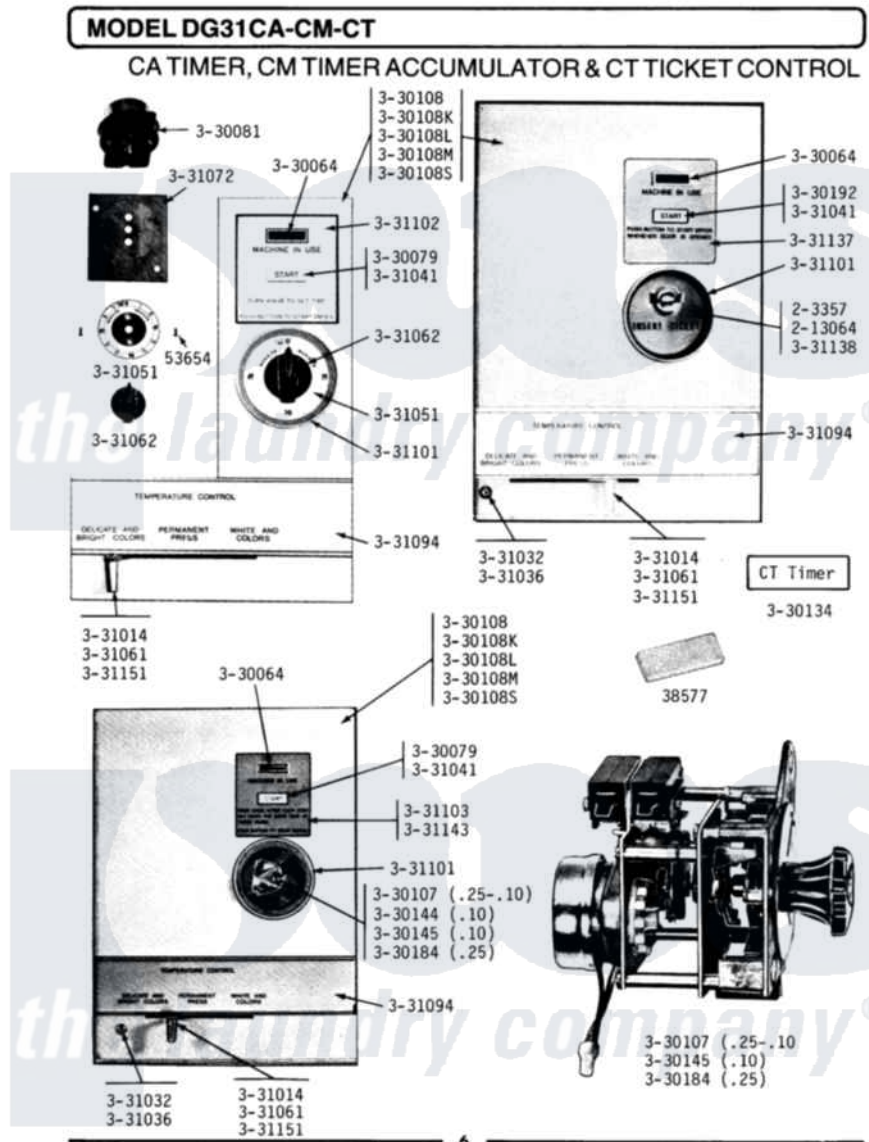

Maytag Residential Maytag GDG31CT Dryer Parts Parts Diagram 03 - TIMER ACCUMULATORS & TICKET CONTROL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
NI	NLA		Not Available	TOOL TO ADJUST TIMING SWITC
"	NLA		Not Available	SCREW, No.5-40 X 3/8
"	NLA		Not Available	PALNUT
"	NLA		Not Available	FRONT PLATE F/TICKET CONTRO
005	Y330064			Pilot Light
006	Y330079		Not Available	SWITCH, PUSH-TO-START
007	330081			Timer - CA 60 Minutes
NI	NLA		Not Available	TIMER ACCUMULATOR - CM
"	NLA		Not Available	FRONT PANEL-WHITE
010	330108L		Not Available	FRONT PANEL-ALMOND
011	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
NI	NLA		Not Available	TIMER W/KNOB AND PIN
"	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
014	Y330145		Not Available	CONTA ACCUMULATOR

014	330143	Not Available	ASSEMBLY
015	330184		Timer Accumulator-25
016	Y330192	Not Available	SWITCH, PUSH TO START
017	331014	8281196	Screw
018	331032	61002031	Screw, Handle
019	331036		Washer-Front Panel Screws
020	331041		Button-Push-To-Start Switch
NI	NLA	Not Available	TIMER DIAL - CA 60 MINUTES
022	331061		Knob For Temperature Contro
NI	NLA	Not Available	KNOB FOR TIMER
"	NLA	Not Available	MOUNTING PLATE FOR TIMER
"	NLA	Not Available	TRIM BAR FOR UPPER PANEL
026	331101	Not Available	BEZEL FOR TIMER-ACCUMULATOR
NI	NLA	Not Available	INSTRUCTION PLATE (CA)
"	NLA	Not Available	INSTRUCTION PLATE - CM
"	NLA	Not Available	INSTRUCTION PLATE-CT
"	NLA	Not Available	MOUNTING PLATE-TICKET CONT
"	NLA	Not Available	INSTRUCT LABEL - SINGLE COI
032	331151		Lever-Temperature Control

