


# Maytag GDG482 03 - FRONT VIEW

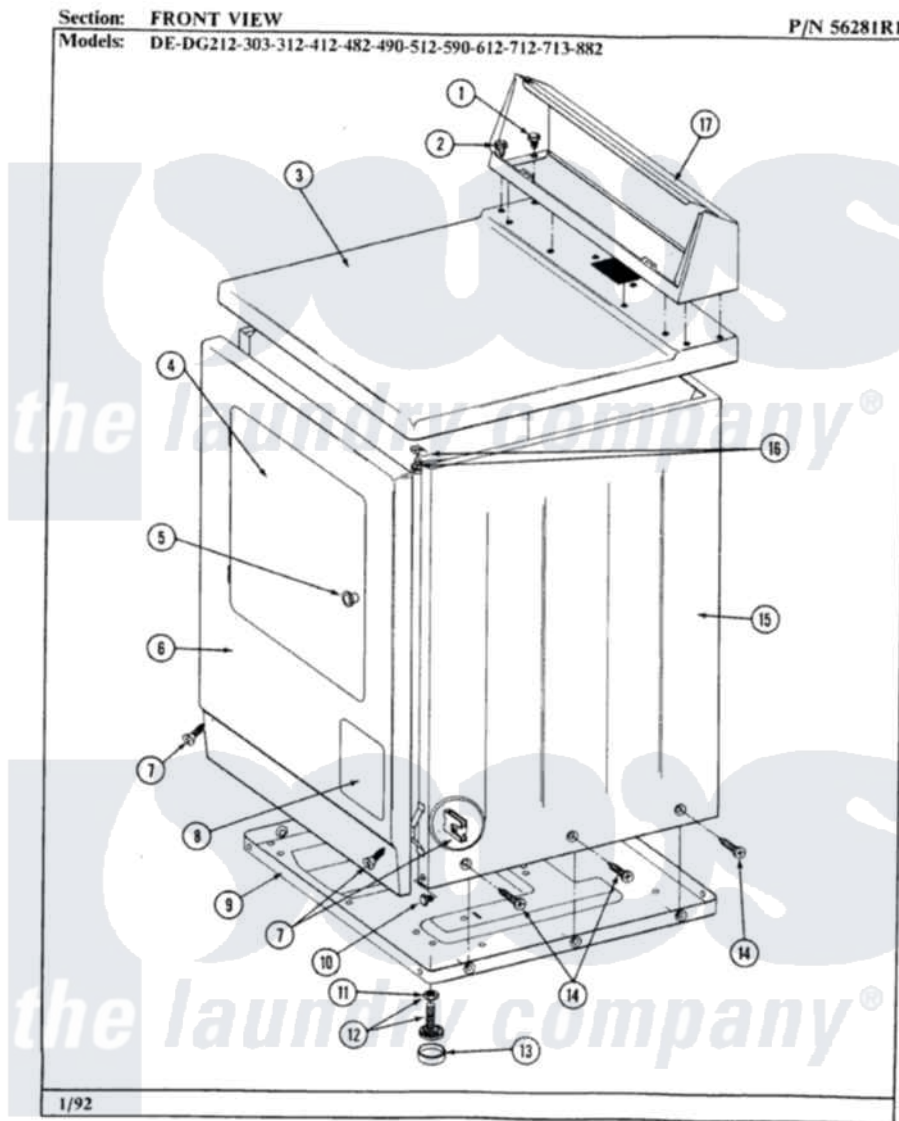

26

Maytag [Residential Maytag GDG482 Dryer Parts](#) Parts Diagram 03 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211194		Not Available	LOCK WASHER
2	<a href="#">Y313559</a>			Screw
3	307104M		Not Available	TOP COVER ASSY
4	306668M		Not Available	DOOR, HARVEST WHEAT
5	303942		Not Available	KNOB AND SCREW
6	304594M	<a href="#">3369903</a>		Dishrack
7	<a href="#">204439</a>			Screw And Fstner Assembly
8	302542M		Not Available	ACCESS DOOR-HARVEST WHEAT
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
10	Y310632	<a href="#">1163839</a>		Screw
11	Y052740	<a href="#">62739</a>		Nut, Lock
12	<a href="#">Y305086</a>			Adjustable Leg And Nut
13	<a href="#">Y314137</a>			Foot, Rubber
14	<a href="#">213007</a>			Xfor Cabinet See Cabinet, Back

15	305302M	Not Available	CABINET-HARVEST WHEAT
16	<a href="#">204445</a>		Screw And Fastener Assembly
17	305193M	Not Available	CONSOLE-HARVEST WHEAT

