


Maytag GDG713 03 - FRONT VIEW

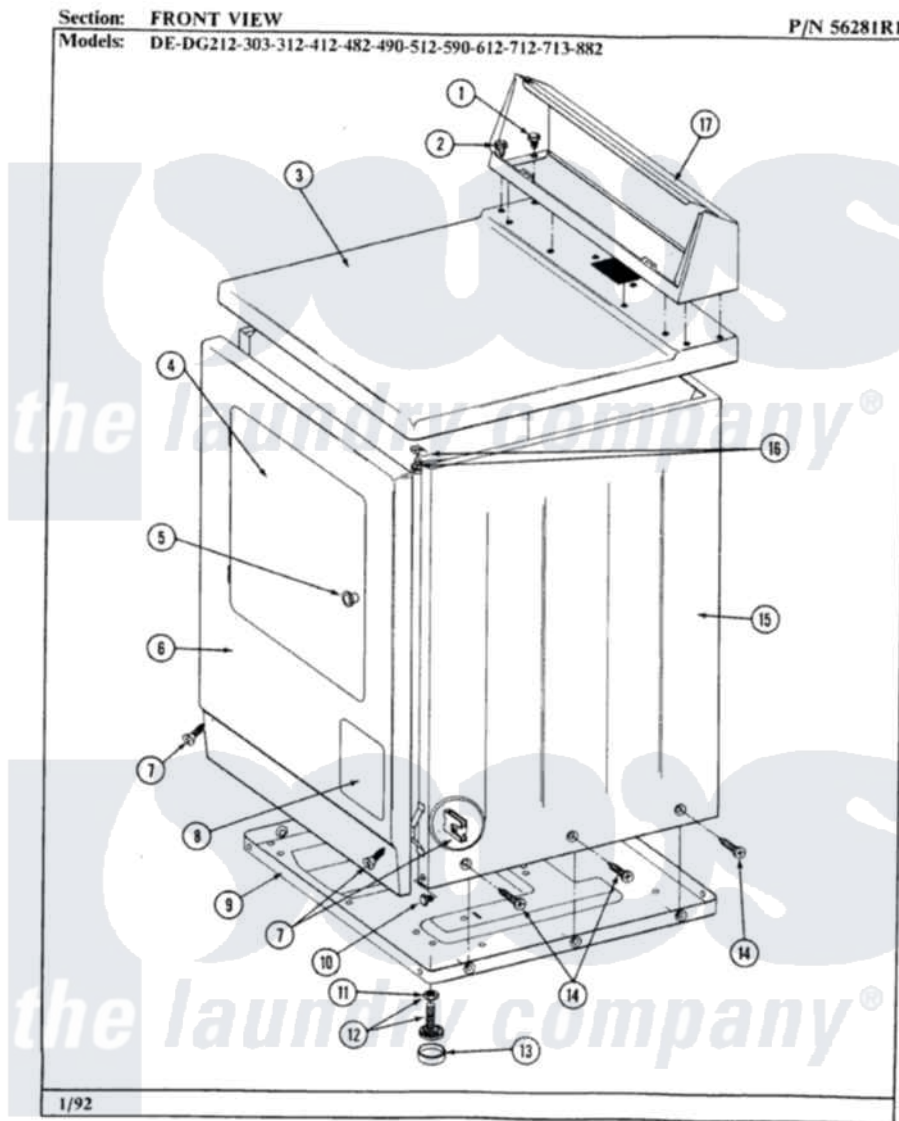

26

Maytag [Residential Maytag GDG713 Dryer Parts](#) Parts Diagram 03 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211194		Not Available	LOCK WASHER
2	Y313559			Screw
3	307104M		Not Available	TOP COVER ASSY
4	306668M		Not Available	DOOR, HARVEST WHEAT
5	303942		Not Available	KNOB AND SCREW
6	304594M	3369903		Dishrack
7	204439			Screw And Fstner Assembly
8	302542M		Not Available	ACCESS DOOR-HARVEST WHEAT
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
10	Y310632	1163839		Screw
11	Y052740	62739		Nut, Lock
12	Y305086			Adjustable Leg And Nut
13	Y314137			Foot, Rubber
14	213007			Xfor Cabinet See Cabinet, Back

15	305302M	Not Available	CABINET-HARVEST WHEAT
16	204445		Screw And Fastener Assembly
17	305193M	Not Available	CONSOLE-HARVEST WHEAT

