


# Maytag GW18G1HW 02 - CONTROL PANEL

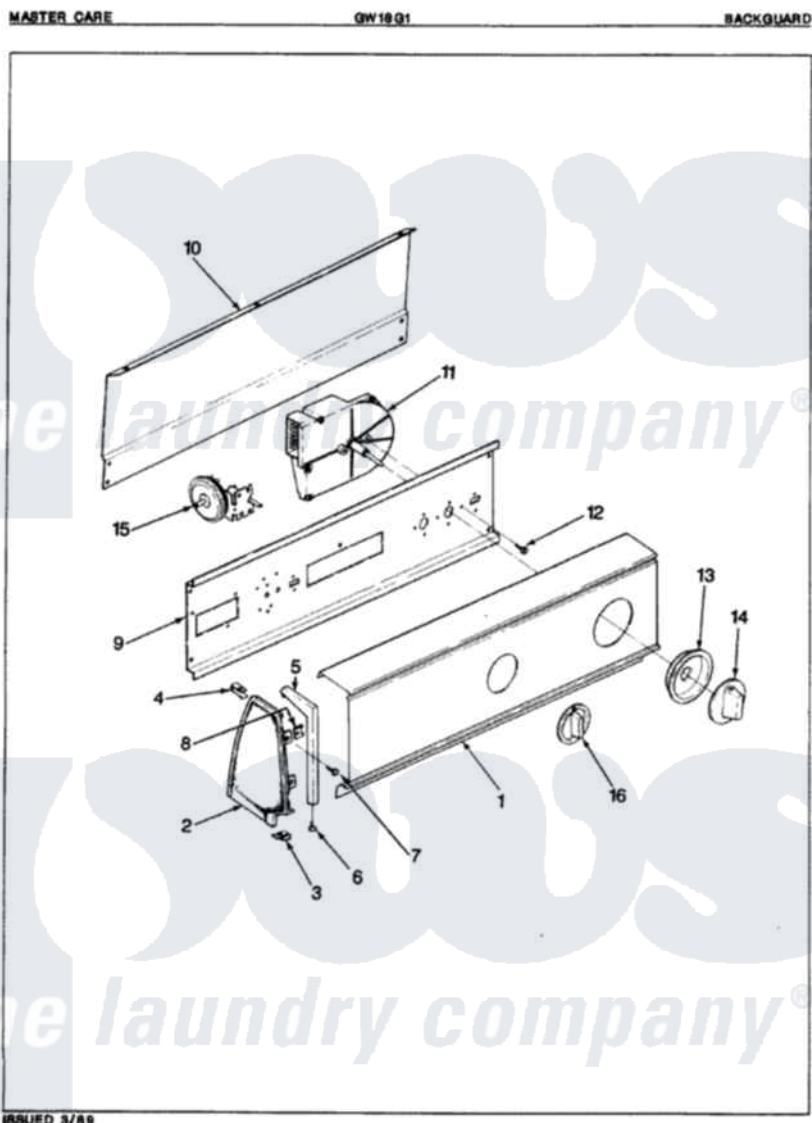

ISSUED 3/89

Maytag [Residential Maytag GW18G1HW Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-1072		Not Available	CONTROL PANEL
2	<a href="#">53-0265</a>			LH Endcap
"	<a href="#">53-0264</a>			RH Endcap
3	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	25-7649	<a href="#">910187</a>		Screw
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	34-9487		Not Available	PLATE, REINFORCEMENT
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0279		Not Available	TRIM, END CAP (RT)
"	53-0280		Not Available	TRIM, END CAP (LT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	<a href="#">53-1676</a>	Shield, Control
10	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>		Screw, Sems
"	25-7853	<a href="#">25-7933</a>	Ring, Retaining
"	53-0268	<a href="#">21001460</a>	Shield, Rear
11	35-0484	Not Available	TIMER
"	<a href="#">35-0115</a>		Timer Motor 1 RPM
12	25-0088	<a href="#">489483</a>	Screw 10-32 X 1/2
13	35-0679	<a href="#">12500057</a>	Knob Ski
14	35-0496	<a href="#">12500057</a>	Knob Ski
15	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0781	Not Available	PRESSURE SWITCH
16	W10124350	Not Available	NOT REQUIRED PART OR SEE NOTE SELECTOR KNOB

