



Maytag [Residential Maytag LA105 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205410		Not Available	TIMER MOTOR 120-60
2	206216			Water Temperature Switch
3	206513		Not Available	WATER LEVEL CONTROL SWITCH
4	206686			Timer
5	206877		Not Available	CONTROL PANEL
6	211065			Spring, Index Wheel
7	211168	W10139210		Screw, 8-18 X 5/16
8	211605			Bezel, Timer Dial
9	213117	67006908		Screw, Ice Rack
10	213966	3400014		Screw
11	214818			Back Up Plate
12	214872			Palnut, End Cap Note: Nut, Lamp Holder
13	214894			Fastener, End Cap
14	214897			Pad, Control Panel
15	215161	22001571		Bezel, Timer Dial

16	215162		Timer Knob
17	215163	Not Available	CAP FOR KNOB
18	215552	Not Available	END CAP, L.H.
19	215553	Not Available	END CAP, R.H.
20	314728	210932	Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct

