


Maytag LA110 05 - CONTROL PANEL,TIMER & SWITCHES (A110)

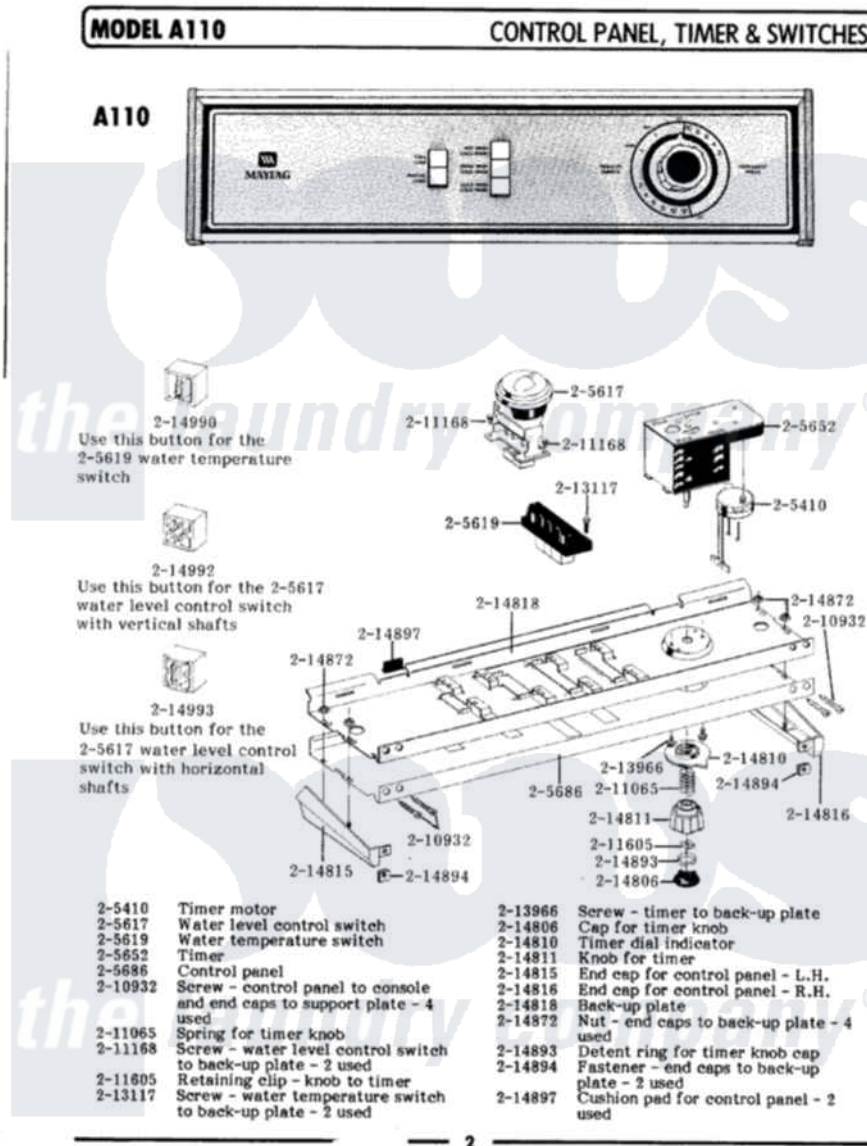

Maytag Residential Maytag LA110 Washer Parts Parts Diagram 05 - CONTROL PANEL,TIMER & SWITCHES (A110)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205410		Not Available	TIMER MOTOR 120-60
2	205617			Water Level Control Switch
3	205619		Not Available	WATER TEMPERATURE SWITCH
4	205652	22205652		Timer
5	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
6	211065			Spring, Index Wheel
7	211168	W10139210		Screw, 8-18 X 5/16
8	211605			Bezel, Timer Dial
9	213117	67006908		Screw, Ice Rack
10	213966	3400014		Screw
11	214806		Not Available	CAP FOR TIMER KNOB
12	214810	22001571		Bezel, Timer Dial
13	214811			Knob For Timer
14	214815			End Cap F/Control Panel-LH
15	214816			End Cap F/Control Panel-RH

16	214818		Back Up Plate
17	214872		Palnut, End Cap Note: Nut, Lamp Holder
18	214893	Not Available	DETENT RING F/TIMER KNOB CA
19	214894		Fastener, End Cap
20	214897		Pad, Control Panel

