



Maytag [Residential Maytag LA112 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (A112)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	<a href="#">22205033</a>		Motor- Tim
2	205410		Not Available	TIMER MOTOR 120-60
3	206204		Not Available	CONTROL PANEL
4	<a href="#">206216</a>			Water Temperature Switch
5	206221		Not Available	WATER LEVEL SWITCH---NA
6	206558		Not Available	CONTROL PANEL
7	<a href="#">206686</a>			Timer
8	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
9	<a href="#">211065</a>			Spring, Index Wheel
10	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
11	<a href="#">211605</a>			Bezel, Timer Dial
12	213117	<a href="#">67006908</a>		Screw, Ice Rack
13	213966	<a href="#">3400014</a>		Screw
14	<a href="#">214815</a>			End Cap F/Control Panel-LH
15	<a href="#">214816</a>			End Cap F/Control Panel-RH

16	<a href="#">214818</a>		Back Up Plate
17	<a href="#">214872</a>		Palnut, End Cap Note: Nut, Lamp Holder
18	<a href="#">214894</a>		Fastener, End Cap
19	<a href="#">214897</a>		Pad, Control Panel
20	215161	<a href="#">22001571</a>	Bezel, Timer Dial
21	<a href="#">215162</a>		Timer Knob
22	215164	Not Available	CAP FOR KNOB

