


Maytag LA182 04 - CONTROL PANEL, TIMER & SWITCHES

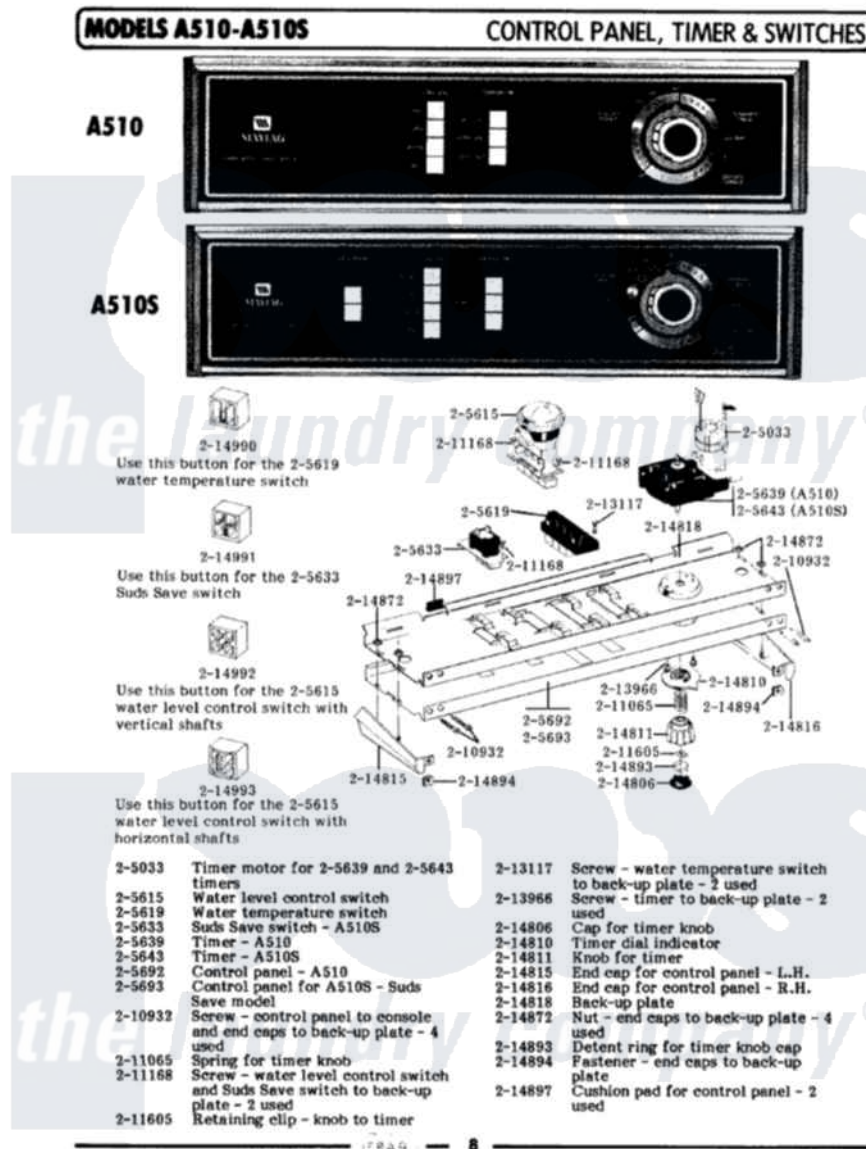

Maytag Residential Maytag LA182 Washer Parts Parts Diagram 04 - CONTROL PANEL, TIMER & SWITCHES
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	22205033		Motor- Tim
2	205615			Water Level Control Switch
3	205619		Not Available	WATER TEMPERATURE SWITCH
4	205639			Timer
5	206144		Not Available	CONTROL PANEL
6	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
7	211065			Spring, Index Wheel
8	211168	W10139210		Screw, 8-18 X 5/16
9	211605			Bezel, Timer Dial
10	213117	67006908		Screw, Ice Rack
11	213966	3400014		Screw
12	214806		Not Available	CAP FOR TIMER KNOB
13	214810	22001571		Bezel, Timer Dial
14	214811			Knob For Timer
15	214815			End Cap F/Control Panel-LH

16	214816		End Cap F/Control Panel-RH
17	214818		Back Up Plate
18	214872		Palnut, End Cap Note: Nut, Lamp Holder
19	214893	Not Available	DETENT RING F/TIMER KNOB CA
20	214894		Fastener, End Cap
21	214897		Pad, Control Panel

