


Maytag LA210S 04 - CONTROL PANEL, TIMER & SWITCHES

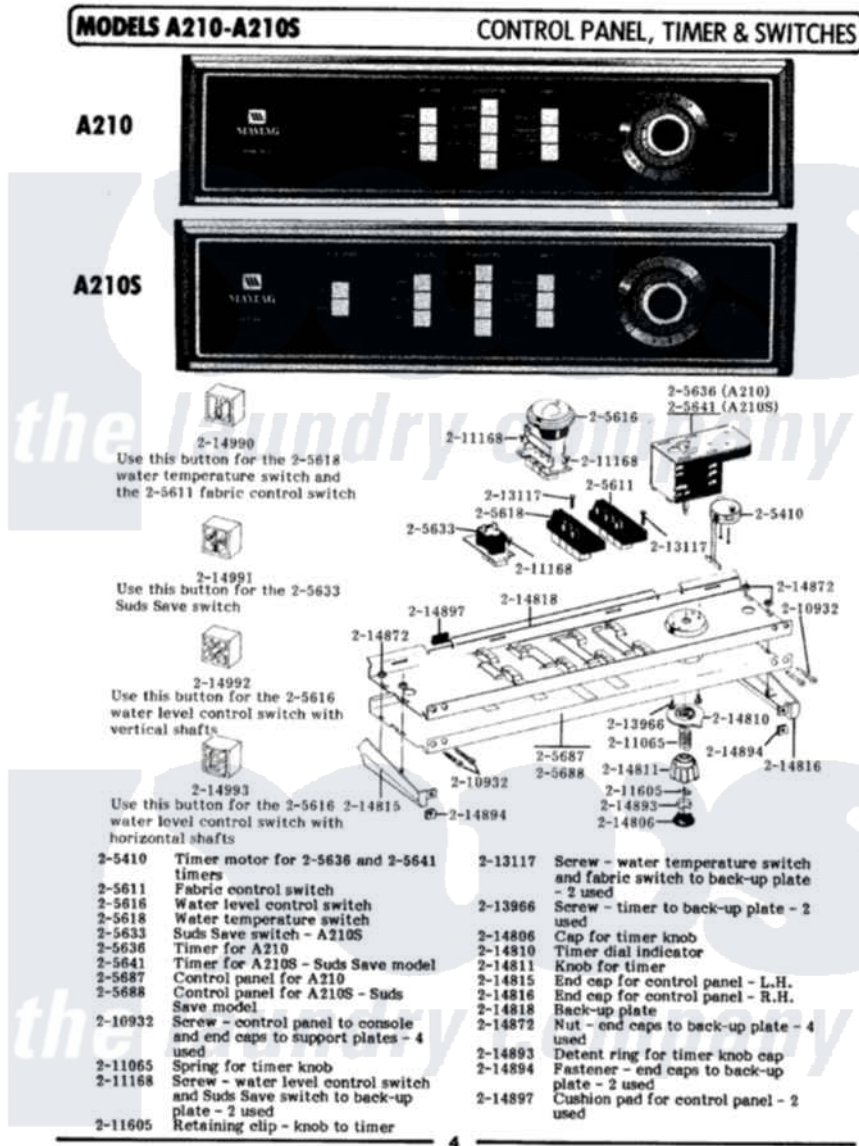

Maytag Residential Maytag LA210S Washer Parts Parts Diagram 04 - CONTROL PANEL, TIMER & SWITCHES
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205410		Not Available	TIMER MOTOR 120-60
2	205611			Fabric Control Switch
3	205616			Water Level Control Switch
4	205618		Not Available	WATER TEMPERATURE SWITCH
5	205633			Suds Save Switch
7	205641			Timer N/a
9	205688		Not Available	CONTROL PANEL
10	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
11	211065			Spring, Index Wheel
12	211168	W10139210		Screw, 8-18 X 5/16
13	211605			Bezel, Timer Dial
14	213117	67006908		Screw, Ice Rack
15	213966	3400014		Screw
16	214806		Not Available	CAP FOR TIMER KNOB
17	214810	22001571		Bezel, Timer Dial

18	214811		Knob For Timer
19	214815		End Cap F/Control Panel-LH
20	214816		End Cap F/Control Panel-RH
21	214818		Back Up Plate
22	214872		Palnut, End Cap Note: Nut, Lamp Holder
23	214893	Not Available	DETENT RING F/TIMER KNOB CA
24	214894		Fastener, End Cap
25	214897		Pad, Control Panel

