



[Maytag Residential Maytag LA302 Washer Parts](#) Parts Diagram 02 - ELECTRICAL PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
3	<a href="#">200977</a>			Solenoid For Water Valve
4	<a href="#">201616</a>			Timer Motor
5	201754		Not Available	PRESSURE SWITCH
7	<a href="#">201781</a>			Temperature Switch
9	201805	<a href="#">12002351</a>		Motor-Drve
10	<a href="#">Y201808</a>			Converter
11	<a href="#">202247</a>			Wire Harness
13	202497		Not Available	UNBALANCE LEVER
14	202770	<a href="#">279347</a>		Switch-Lid
15	<a href="#">202772</a>			Timer
17	202787	<a href="#">203174</a>		Timer Dial
19	210175		Not Available	WIRE CONNECTOR
20	210442		Not Available	WASHER NYLON
21	<a href="#">211065</a>			Spring, Index Wheel
22	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16

23	<a href="#">211223</a>		Bumper, Unbalance
24	211225	Not Available	PAD FOR UNBALANCE BUMPER
25	<a href="#">211251</a>		Screw, Transformer
26	211586	Not Available	SCREW, No.8 X 7/8 INCH
27	211587	Not Available	SCREW, No.8 X 1/4 INCH
28	<a href="#">211605</a>		Bezel, Timer Dial
29	211613	Not Available	CAP, KNOB
30	211737	<a href="#">248562</a>	Terminal
31	211835	Not Available	CONTROL KNOB - TIMER
32	212040	Not Available	LOW BUTTON
33	212041	Not Available	MEDIUM BUTTON
34	212042	Not Available	FULL BUTTON
40	212053	Not Available	COLD BUTTON
41	212054	Not Available	WARM BUTTON
42	212055	Not Available	HOT BUTTON
43	212062	Not Available	RECTANGULAR PLUG
44	212220	<a href="#">213501</a>	Screw, No.6-20 X 1-1/8 Inch
45	212389	Not Available	LENS
46	212394	Not Available	CLIP FOR LAMP
47	<a href="#">212813</a>		Pin For Lid Switch
48	212814	<a href="#">204968</a>	Plunger And Bracket Assembly--W
49	<a href="#">Y310376</a>		Clip, Door Switch Harness
50	053759	<a href="#">25-7614</a>	Screw

**Howes**  
the laundry company®

**Howes**  
the laundry company®