



[Maytag Residential Maytag LA302 Washer Parts Parts Diagram 04 - GYRATATOR AND ACCESSORIES](#)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	201379		Not Available	AGITATOR - BLACK
2	203056		Not Available	LINT FILTER
3	203057		Not Available	FILTER W/SEAL
4	A04731		Not Available	SPLINE, AGITATOR
5	211654		Not Available	O RING SEAL
6	211655		Not Available	SHROUD
7	211659		Not Available	SCREW, No.10-24 X 5/8 INCH
8	<a href="#">211667</a>			Rubber Ring
9	212815		Not Available	DISPENSER CUP
10	038313	<a href="#">22038313</a>		Wrench, Spanner
11	Y038315	<a href="#">038315</a>		Tool