


Maytag LA305 05 - CONTROL PANEL, TIMER & SWITCHES

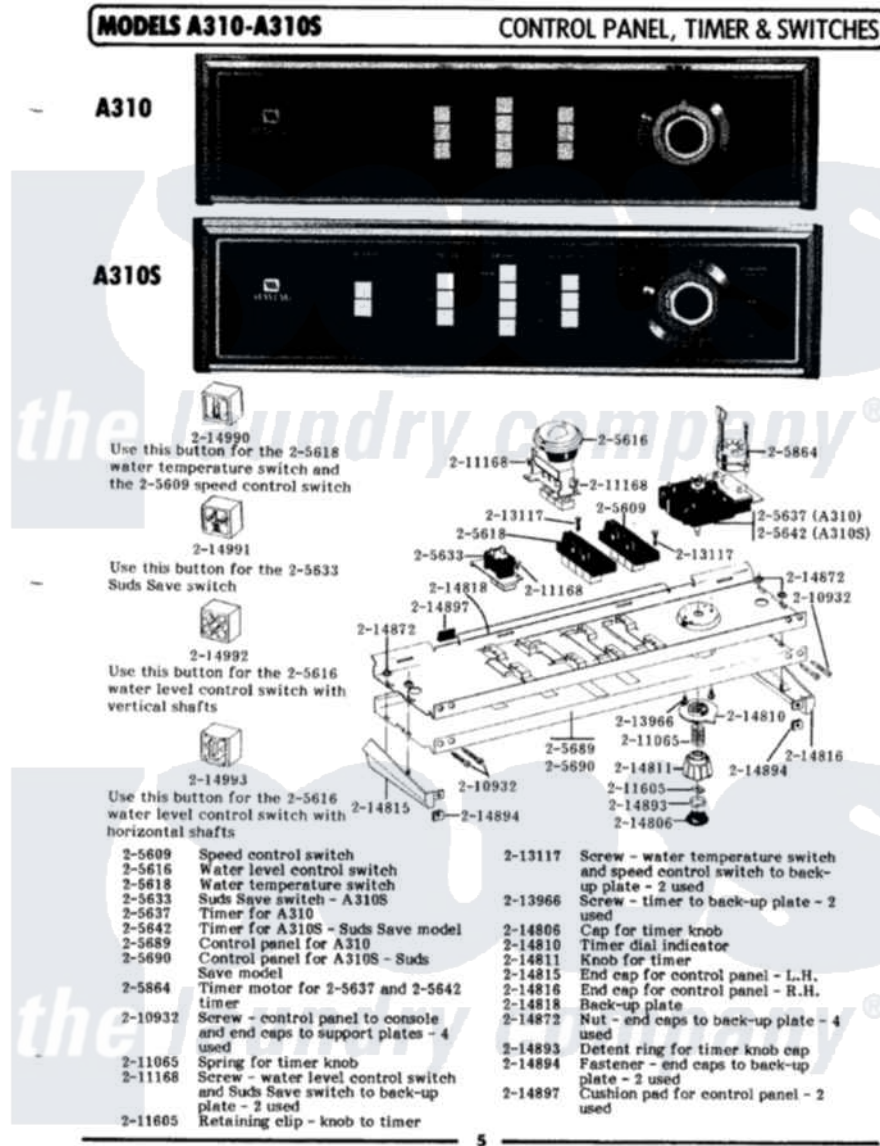

Maytag Residential Maytag LA305 Washer Parts Parts Diagram 05 - CONTROL PANEL, TIMER & SWITCHES
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	206017			Speed Control Switch
2	205616			Water Level Control Switch
3	205619		Not Available	WATER TEMPERATURE SWITCH
4	205652	22205652		Timer
5	206188		Not Available	CONTROL PANEL
6	205864		Not Available	TIMER MOTOR 120-60
7	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
8	211065			Spring, Index Wheel
9	211168	W10139210		Screw, 8-18 X 5/16
10	211605			Bezel, Timer Dial
11	213117	67006908		Screw, Ice Rack
12	213966	3400014		Screw
13	214806		Not Available	CAP FOR TIMER KNOB
14	214810	22001571		Bezel, Timer Dial
15	214811			Knob For Timer

17	214815		End Cap F/Control Panel-LH
18	214816		End Cap F/Control Panel-RH
19	214818		Back Up Plate
20	214872		Palnut, End Cap Note: Nut, Lamp Holder
21	214893	Not Available	DETENT RING F/TIMER KNOB CA
22	214894		Fastener, End Cap
23	214897		Pad, Control Panel
24	206025	Not Available	WIRE HARNESS

