



[Maytag Residential Maytag LA308 Washer Parts](#) Parts Diagram 03 - ELECTRICAL COMPONENTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y200832			Capacitor
2	201805	12002351		Motor-Drve
3	203235		Not Available	WIRE HARNESS - FILL
4	203237			No. 17 Wire With Terminal
5	204590			Cord, Power
6	204968			Plunger And Bracket Assembly--W
7	205001			Timer
8	205006			Major Wire Harness
9	205033	22205033		Motor- Tim
10	205166		Not Available	TIMER DIAL, SUN-GLOW
11	205320			Temperature Control Switch
12	205336			Water Level Switch
13	205410		Not Available	TIMER MOTOR 120-60
14	205415	279347		Switch-Lid
15	205613			Water Valve
16	206103			Capacitor Kit

17	210186	3370225	Screw
18	210866		Nut, Twin Speed
19	211065		Spring, Index Wheel
20	211149		Clip, Capacitor
21	211500		Washer, Bracket To Top Cover
22	211605		Bezel, Timer Dial
23	211737	248562	Terminal
24	211881		Grommet, Cord Part Not Used- Gas Models Only
25	212937	Not Available	BARRIER, MOISTURE
26	213077	Not Available	CAP FOR TIMER KNOB
27	213501		Screw, No.6-20 X 1-1/8 Inch
28	213718		Plunger, Lid Switch
29	213719	Not Available	LEVER, UNBALANCE
30	213720		Spring, Lid Switch
31	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
32	214337	96160	Screen
33	301548		Clamp, Ground Wire
34	303846	22003781	Screw, Ground Strap
35	311155		Ground Wire And Clamp
36	313122		Screw - Baffle To Tumbler
37	Y313262	W10116752	Retainer-
38	910182	25-7809	Screw, No.6-20 1/2 Flthd Torx

Howes
the laundry company®

Howes
the laundry company®