


# Maytag LA310S 04 - CONTROL PANEL,TIMER & SWITCHES

## MODELS A310-A310S CONTROL PANEL, TIMER & SWITCHES

A310



A310S

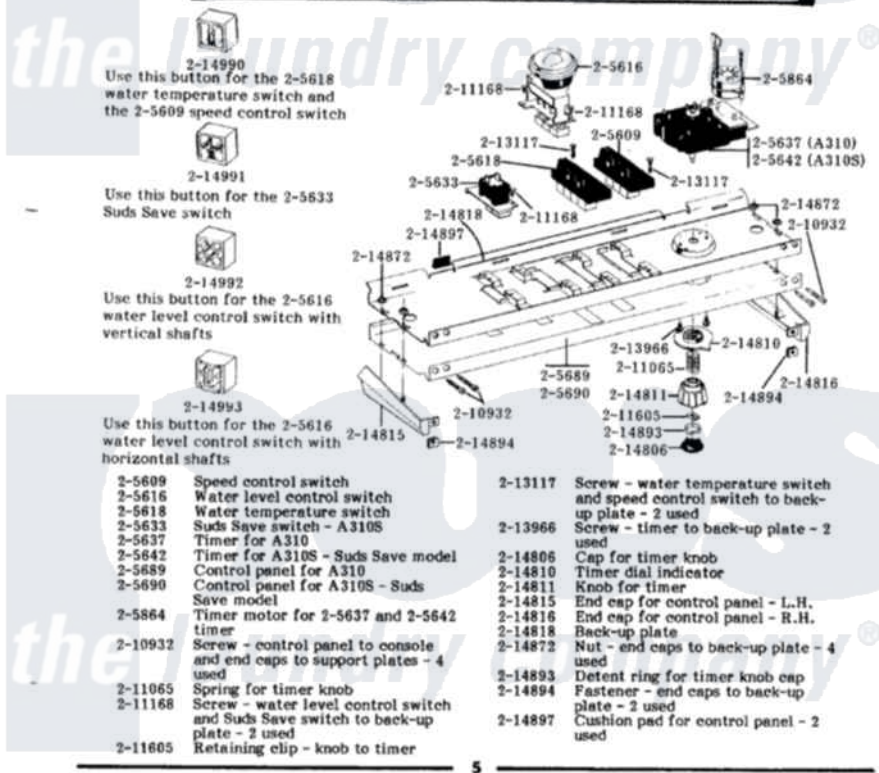

Maytag Residential Maytag LA310S Washer Parts Parts Diagram 04 - CONTROL PANEL,TIMER & SWITCHES  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">Y205609</a>			Speed Control Switch
2	<a href="#">205616</a>			Water Level Control Switch
3	205618		Not Available	WATER TEMPERATURE SWITCH
4	<a href="#">205633</a>			Suds Save Switch
6	<a href="#">205642</a>			Timer
8	205690		Not Available	CONTROL PANEL
9	205864		Not Available	TIMER MOTOR 120-60
10	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
11	<a href="#">211065</a>			Spring, Index Wheel
12	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
13	<a href="#">211605</a>			Bezel, Timer Dial
14	213117	<a href="#">67006908</a>		Screw, Ice Rack
15	213966	<a href="#">3400014</a>		Screw
16	214806		Not Available	CAP FOR TIMER KNOB
17	214810	<a href="#">22001571</a>		Bezel, Timer Dial

18	<a href="#">214811</a>		Knob For Timer
19	<a href="#">214815</a>		End Cap F/Control Panel-LH
20	<a href="#">214816</a>		End Cap F/Control Panel-RH
21	<a href="#">214818</a>		Back Up Plate
22	<a href="#">214872</a>		Palnut, End Cap Note: Nut, Lamp Holder
23	214893	Not Available	DETENT RING F/TIMER KNOB CA
24	<a href="#">214894</a>		Fastener, End Cap
25	<a href="#">214897</a>		Pad, Control Panel

