



# Maytag LA312 05 - CONTROL PANEL


## MODEL A312-A312S CONTROL PANEL

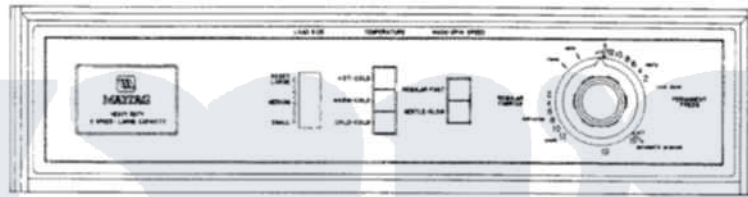

A312

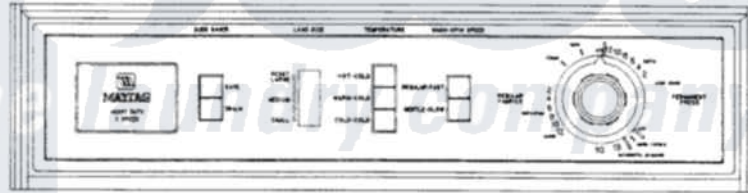

A312S

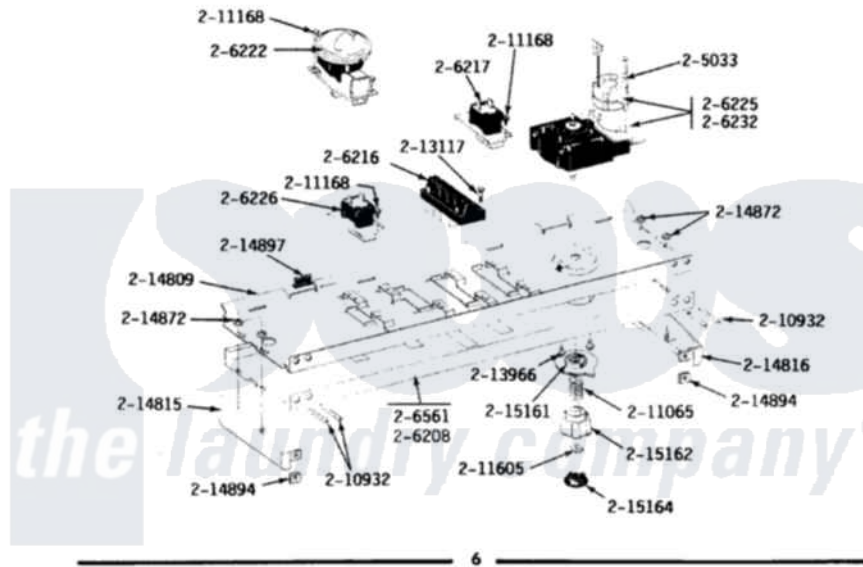

Maytag [Residential Maytag LA312 Washer Parts](#) Parts Diagram 05 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	<a href="#">22205033</a>		Motor- Tim
3	<a href="#">206216</a>			Water Temperature Switch
4	206217		Not Available	SPEED CONTROL SWITCH
5	206222		Not Available	INFINITE WATER LEVEL SWITCH
6	<a href="#">206225</a>			Timer
9	<a href="#">206561</a>			Control Panel
10	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
11	<a href="#">211065</a>			Spring, Index Wheel
12	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
13	<a href="#">211605</a>			Bezel, Timer Dial
14	213117	<a href="#">67006908</a>		Screw, Ice Rack
15	213966	<a href="#">3400014</a>		Screw
16	<a href="#">214809</a>			Back Up Plate
17	<a href="#">214815</a>			End Cap F/Control Panel-LH
18	<a href="#">214816</a>			End Cap F/Control Panel-RH

19	<a href="#">214872</a>		Palnut, End Cap Note: Nut, Lamp Holder
20	<a href="#">214894</a>		Fastener, End Cap
21	<a href="#">214897</a>		Pad, Control Panel
22	215161	<a href="#">22001571</a>	Bezel, Timer Dial
23	<a href="#">215162</a>		Timer Knob
24	215164	Not Available	CAP FOR KNOB

