


Maytag LA382 09 - TUB-INNER & OUTER

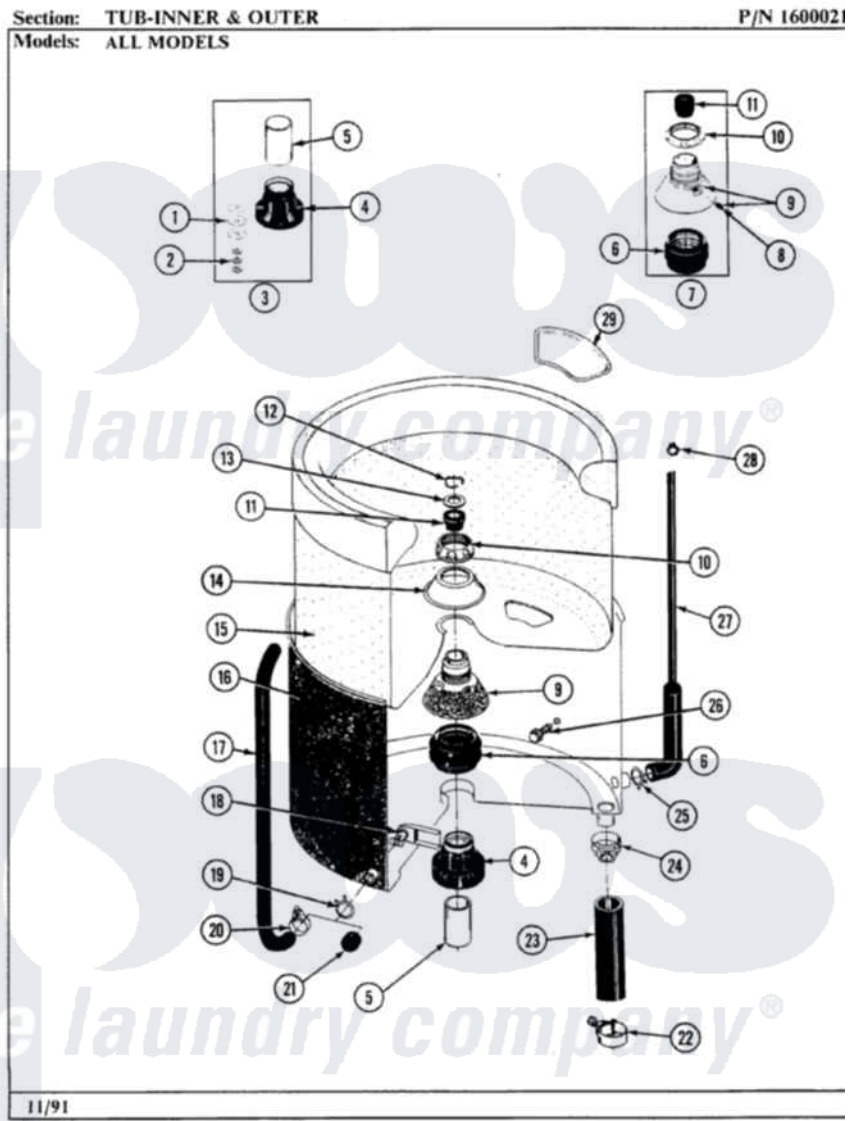

20

Maytag Residential Maytag LA382 Washer Parts Parts Diagram 09 - TUB-INNER & OUTER
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211100			Washer, Outer Tub
2	Y054867			Washer, Lock
3	204013	6-2040130		Tub Bearin
4	200824	6-2040130		Tub Bearin
5	211130			Bearing Liner, Tub Bearing
6	201537	6-2095720		Mounting S
7	204012	6-2095720		Mounting S
8	211618	22001423		Set Screw, Mounting Stem
9	202521	6-2095720		Mounting S
10	211047	6-2110472		Nut- Clamp
11	Y0A4298	6-0A57420		Seal- Agitator
12	Y015667			Retaining Ring
13	Y015666			Washer, Retaining -
14	211210			Washer, Clamping Nut
15	207831		Not Available	TUB, INNER (W/PLUG)
16	205484			Tub, Outer Part Not Used

17	214433		Tube, Inlet Part Not Used
18	214434		Spout, Deflector
19	214739	596669	Clamp, Manifold
20	205161	489503	Clamp
21	214725		Cap For Spout-Outer Tub
22	200461	285655	Clamp, Hose
23	213045		Hose, Outer Tub Part Not Used
24	200900	616099	Clamp
25	211641		Clamp, 1-1/16"
26	200744	W10175939	Bolt
"	205254	W10175938	Bolt
27	212942	22001619	Tube, Water Level Switch
28	410296	596669	Clamp, Manifold
29	215980		Plug, Filter Hole

