


Maytag LA511S 04 - CONTROL PANEL, TIMER & SWITCHES

MODELS A510-A510S CONTROL PANEL, TIMER & SWITCHES

A510



A510S

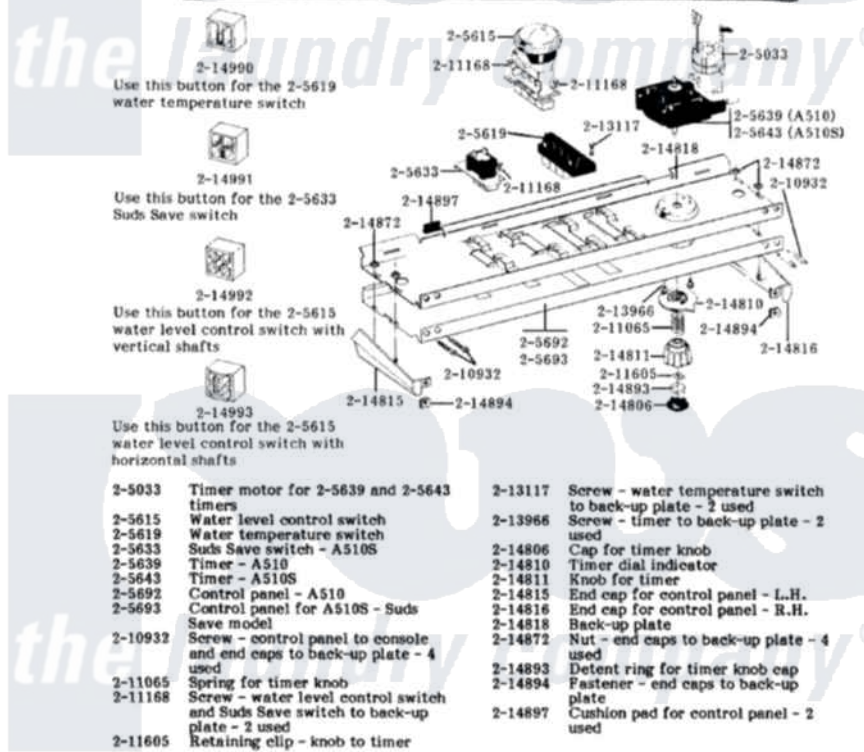

Maytag Residential Maytag LA511S Washer Parts Parts Diagram 04 - CONTROL PANEL, TIMER & SWITCHES
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------|---------------------------|---------------|---|
| 1 | 205410 | | Not Available | TIMER MOTOR 120-60 |
| 2 | 205611 | | | Fabric Control Switch |
| 3 | 205615 | | | Water Level Control Switch |
| 4 | 205618 | | Not Available | WATER TEMPERATURE SWITCH |
| 5 | 205639 | | | Timer |
| 6 | 205694 | | Not Available | CONTROL PANEL |
| 7 | 210932 | | | Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct |
| 8 | 211065 | | | Spring, Index Wheel |
| 9 | 211168 | W10139210 | | Screw, 8-18 X 5/16 |
| 10 | 211605 | | | Bezel, Timer Dial |
| 11 | 213117 | 67006908 | | Screw, Ice Rack |
| 12 | 213966 | 3400014 | | Screw |
| 13 | 214806 | | Not Available | CAP FOR TIMER KNOB |
| 14 | 214810 | 22001571 | | Bezel, Timer Dial |
| 15 | 214811 | | | Knob For Timer |

| | | | |
|----|-------------------------|------------------------|---|
| 16 | 214815 | | End Cap F/Control Panel-LH |
| 17 | 214816 | | End Cap F/Control Panel-RH |
| 18 | 214818 | | Back Up Plate |
| 19 | 214872 | | Palnut, End Cap Note: Nut, Lamp Holder |
| 20 | 214893 | Not Available | DETENT RING F/TIMER KNOB CA |
| 21 | 214894 | | Fastener, End Cap |
| 22 | 214897 | | Pad, Control Panel |
| 23 | 205161 | 489503 | Clamp |
| 25 | 205537L | | Top Cover-Almond----NA |
| 26 | 214433 | | Tube, Inlet Part Not Used |
| 27 | 214434 | | Spout, Deflector |
| 28 | 214436 | | Gasket |
| 29 | 214437 | 215577 | Bleach Inlet White |

