



Maytag Residential Maytag LA512S Washer Parts Parts Diagram 04 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	22205033		Motor- Tim
2	206216			Water Temperature Switch
3	206223	22206223		Switch- Wa
4	206226		Not Available	SUDS SAVE SWITCH
6	206236		Not Available	TIMER
8	206566		Not Available	CONTROL PANEL
9	206630	569869		Thermostat
10	206632		Not Available	CONTROL PANEL
11	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
12	211065			Spring, Index Wheel
13	211168	W10139210		Screw, 8-18 X 5/16
14	211605			Bezel, Timer Dial
15	213117	67006908		Screw, Ice Rack
16	213966	3400014		Screw
17	214809			Back Up Plate
18	214815			End Cap F/Control Panel-LH

19	214816		End Cap F/Control Panel-RH
20	214872		Palnut, End Cap Note: Nut, Lamp Holder
21	214894		Fastener, End Cap
22	214897		Pad, Control Panel
23	215161	22001571	Bezel, Timer Dial
24	215162		Timer Knob
25	215164	Not Available	CAP FOR KNOB

