


SPECIFY COLOR IF OTHER THAN WHITE

FRONT VIEW

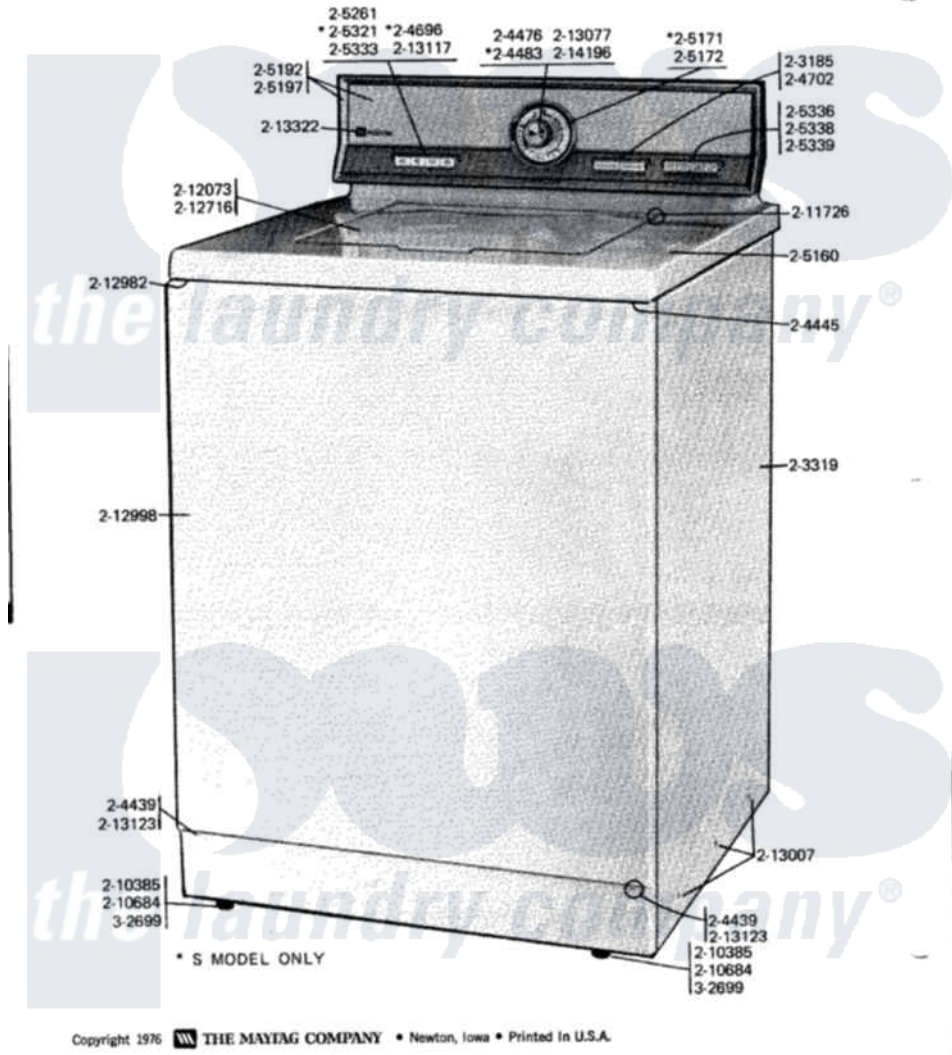

Maytag Residential Maytag LA608S Washer Parts Parts Diagram 08 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203185		Not Available	FABRIC SWITCH
2	203319	<a href="#">22203319</a>		Cabinet
3	<a href="#">204439</a>			Screw And Fstner Assembly
4	<a href="#">204445</a>			Screw And Fastener Assembly
5	204483		Not Available	TIMER
6	<a href="#">204696</a>			Button Kit For 2-3168
7	204702		Not Available	BUTTON KIT FOR 2-3185
8	205160		Not Available	TOP COVER-WHITE
9	205171		Not Available	TIMER DIAL, SUN-GLOW
10	205192		Not Available	CONTROL PANEL, SUN-GLOW
11	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
12	<a href="#">205321</a>			Temperature Control Switch
13	205333		Not Available	BUTTON KIT FOR 2-5261
14	<a href="#">205336</a>			Water Level Switch
15	<a href="#">205338</a>			Button Kit For 2-5336-1

16	<a href="#">205339</a>		Button Kit For 2-5336
17	<a href="#">210385</a>		Lock Nut For Adjustable Leg
18	<a href="#">210684</a>		Foot, Adjustable Leg
19	<a href="#">211726</a>		Hinge, Ball Lid
20	212073		LID (WHITE)
21	<a href="#">212277</a>		Screw, No.8 X 1/2 Inch
22	<a href="#">212716</a>		Bumper, Lid
23	212982	<a href="#">22001650</a>	Fastener, Spring
24	212998	Not Available	PANEL, FRONT (WHT)
25	<a href="#">213007</a>		Xfor Cabinet See Cabinet, Back
26	213077	Not Available	CAP FOR TIMER KNOB
27	213117	<a href="#">67006908</a>	Screw, Ice Rack
28	213123	<a href="#">22001496</a>	Front Panel Fastener And Screw
29	213322	Not Available	MAYTAG DECAL
30	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
31	Y302699	<a href="#">22003428</a>	Leg, Adjustable

