



Maytag Residential Maytag LA612 Washer Parts Parts Diagram 05 - ORBITAL TRANSMISSION

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y058700	675652		Adhesive
2	206478		Not Available	SCREW & WASHER FOR AGITATOR
3	206602	207843		Lip Seal Repair Kit
4	206624	6-2097750		Trans Dee
5	206625	6-2097790		Transmison
6	206628			Cover, Transmission
7	Y206629			Pin, Collar
8	206685	6-2066850		Yoke
9	206707	6-2097750		Trans Dee
10	206708	6-2097790		Transmison
11	206712	6-2097820		Kit- Shaft
12	206713	6-2067130		Gear- Beve
13	206822			Dispenser, Lint Filter
14	206823	Y207427		Lint Filter Shallow
15	206843	207538		Agitator W/Lock Screw
16	206957	207228		Agitator W/Lock Screw

17	210690		Seal, Rubber
18	211059	6-2301530	Pulley
19	211089		Lug, Stop Pulley
20	211090	22003555	Washer, Stop Lug
21	211375	681582	Screw
22	211483	6-2114830	Washer- SP
23	215394		Washer, Bevel Gear
24	215395		Plate, Clutch
25	215401	W10221114	Pinion
26	215410	12001450	Ctr Shaft W/Collar Andkeeper-Dp
27	215411	12001451	Ctr Shaft W/Collar Andkeeper-Sha
28	215415	Not Available	COLLAR, LOWER
29	215417	Not Available	SCREW, TRANSMISSION COVER
30	215533	215733	Dispensing Cup
31	215581		Spring, Agitator Shaft

