


Maytag LA810 04 - CONTROL PANEL, TIMER & SWITCHES (A810)

MODEL A810 CONTROL PANEL, TIMER & SWITCHES

A810

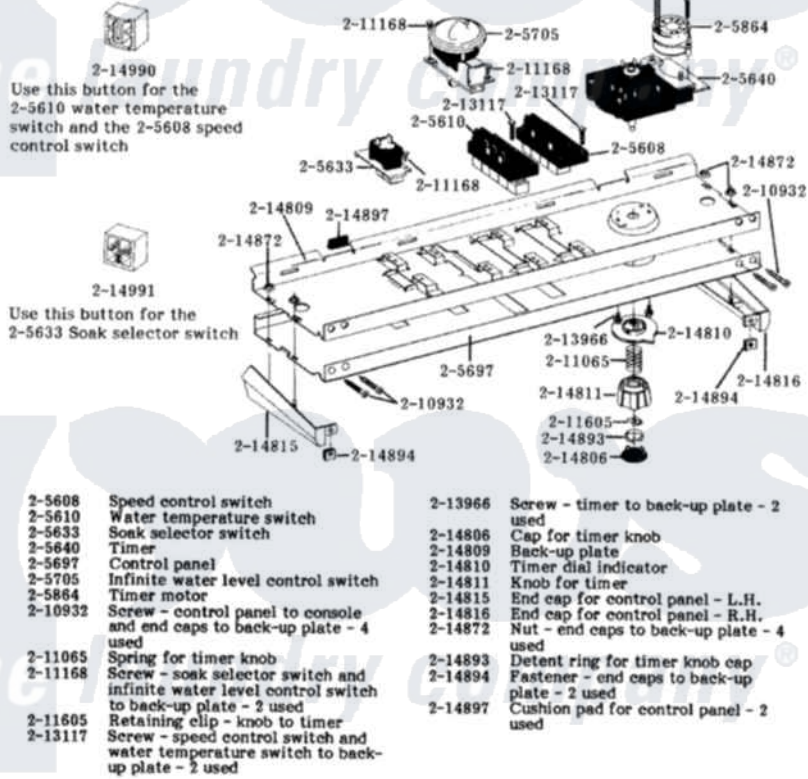

Maytag Residential Maytag LA810 Washer Parts Parts Diagram 04 - CONTROL PANEL, TIMER & SWITCHES (A810)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205608		Not Available	SPEED CONTROL SWITCH
2	205610			Water Temperature Switch
3	205633			Suds Save Switch
4	205640			Timer
5	205697		Not Available	CONTROL PANEL
7	205864		Not Available	TIMER MOTOR 120-60
8	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
9	211065			Spring, Index Wheel
10	211168	W10139210		Screw, 8-18 X 5/16
11	211605			Bezel, Timer Dial
12	213117	67006908		Screw, Ice Rack
13	213966	3400014		Screw
14	214806		Not Available	CAP FOR TIMER KNOB
15	214809			Back Up Plate
16	214810	22001571		Bezel, Timer Dial
17	214811			Knob For Timer

18	214815		End Cap F/Control Panel-LH
19	214816		End Cap F/Control Panel-RH
20	214872		Palnut, End Cap Note: Nut, Lamp Holder
21	214893	Not Available	DETENT RING F/TIMER KNOB CA
22	214894		Fastener, End Cap
23	214897		Pad, Control Panel

