


Maytag LA8420 04 - CONTROL PANEL

SECTION: CONTROL PANEL
 MODEL: A8420 A8440

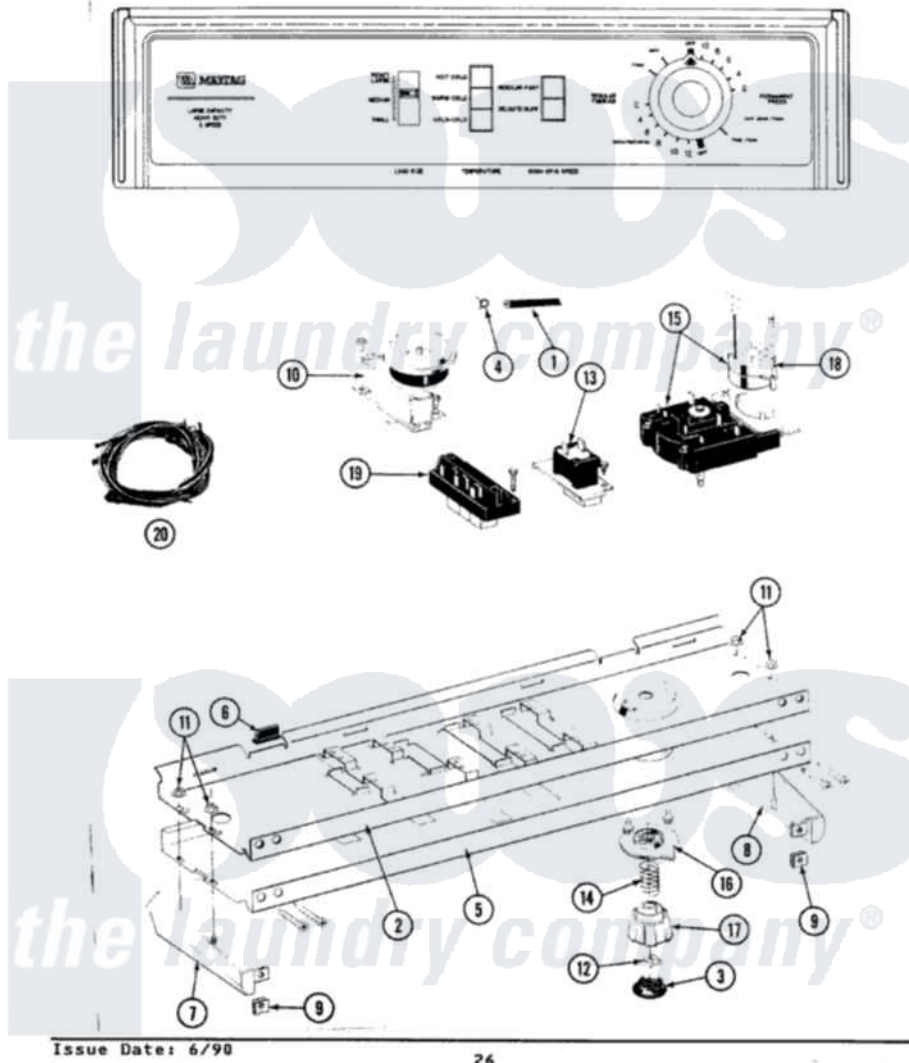

Issue Date: 6/90

26

Maytag [Residential Maytag LA8420 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	22001619		Tube, Water Level Switch
2	214809			Back Up Plate
"	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	215821		Not Available	CAP, KNOB
4	410296	596669		Clamp, Manifold
5	207404		Not Available	CONTROL PANEL
"	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
6	214897			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	214894			Fastener, End Cap
10	211168	W10139210		Screw, 8-18 X 5/16
"	207362		Not Available	INFINITE LEVEL PRESSURE SWITCH
11	214872			Palnut, End Cap Note: Nut, Lamp Holder

12	211605		Bezel, Timer Dial
13	213117	67006908	Screw, Ice Rack
"	207370		Speed Control Switch - 2 Butto
14	211065		Spring, Index Wheel
15	207374	Not Available	TIMER
"	213966	3400014	Screw
16	215827	Not Available	TIMER DIAL SKIRT
17	215828		Knob, Timer
18	205033	22205033	Motor- Tim
19	213117	67006908	Screw, Ice Rack
"	207368	Not Available	TEMP CONTROL SWITCH - 3 BUTTON
20	207384	Not Available	WIRE HARNESS

the laundry company[®]

the laundry company[®]

the laundry company[®]