


# Maytag LA9700S 04 - CONTROL PANEL

SECTION: CONTROL PANEL  
 MODEL: A9700 A9700S A9700W SERIES 01

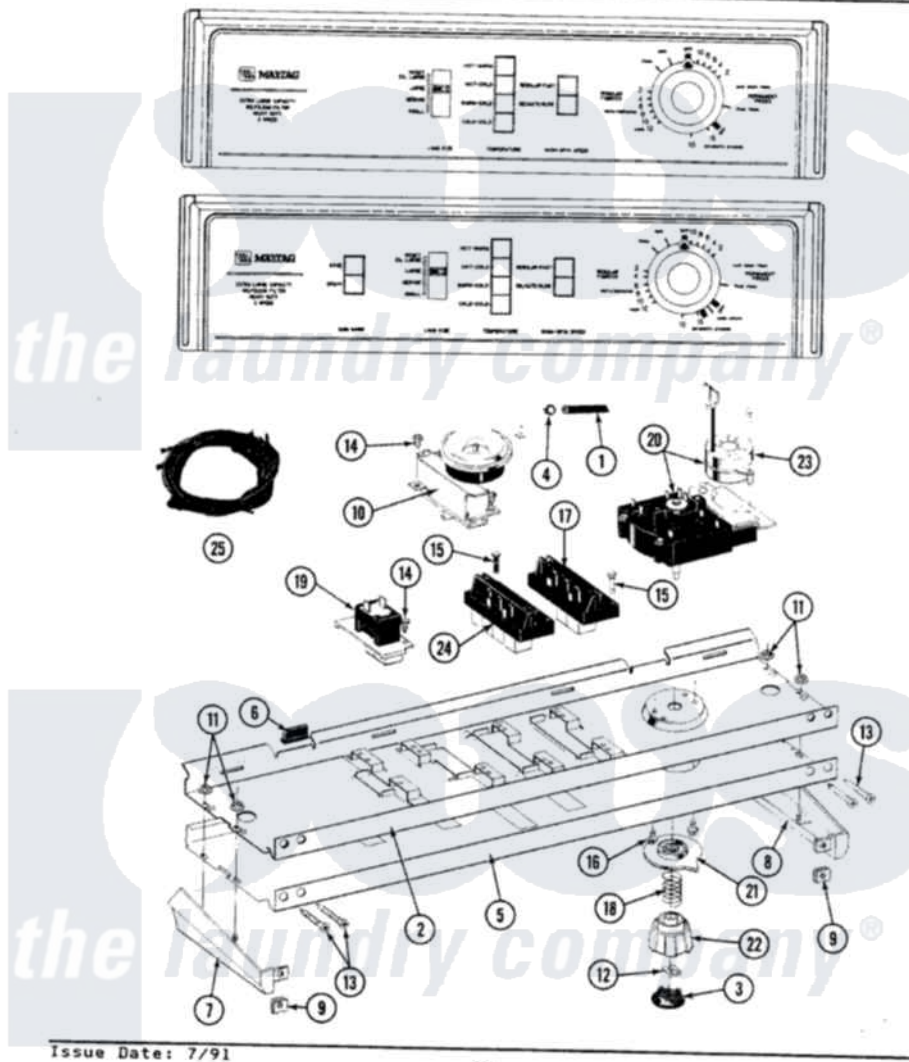

Maytag [Residential Maytag LA9700S Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">214809</a>			Back Up Plate
3	215821		Not Available	CAP, KNOB
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	207386		Not Available	CONTROL PANEL
6	<a href="#">214897</a>			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">207360</a>			Infinite Level Press Switch
11	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
12	<a href="#">211605</a>			Bezel, Timer Dial
13	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
14	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
15	213117	<a href="#">67006908</a>		Screw, Ice Rack

16	213966	<a href="#">3400014</a>		Screw
17	<a href="#">207370</a>			Speed Control Switch - 2 Butto
18	<a href="#">211065</a>			Spring, Index Wheel
19	<a href="#">207365</a>			2 Button Switch
20	<a href="#">207373</a>			Timer
"	207372		Not Available	TIMER
21	215827		Not Available	TIMER DIAL SKIRT
22	<a href="#">215828</a>			Knob, Timer
23	205033	<a href="#">22205033</a>		Motor- Tim
24	207367		Not Available	TEMP CONTROL SWITCH - 4 BUTTON
25	<a href="#">207409</a>			Wire Harness
"	207381		Not Available	WIRE HARNESS

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>