


# Maytag LAT6914AAL 04 - CONTROL PANEL

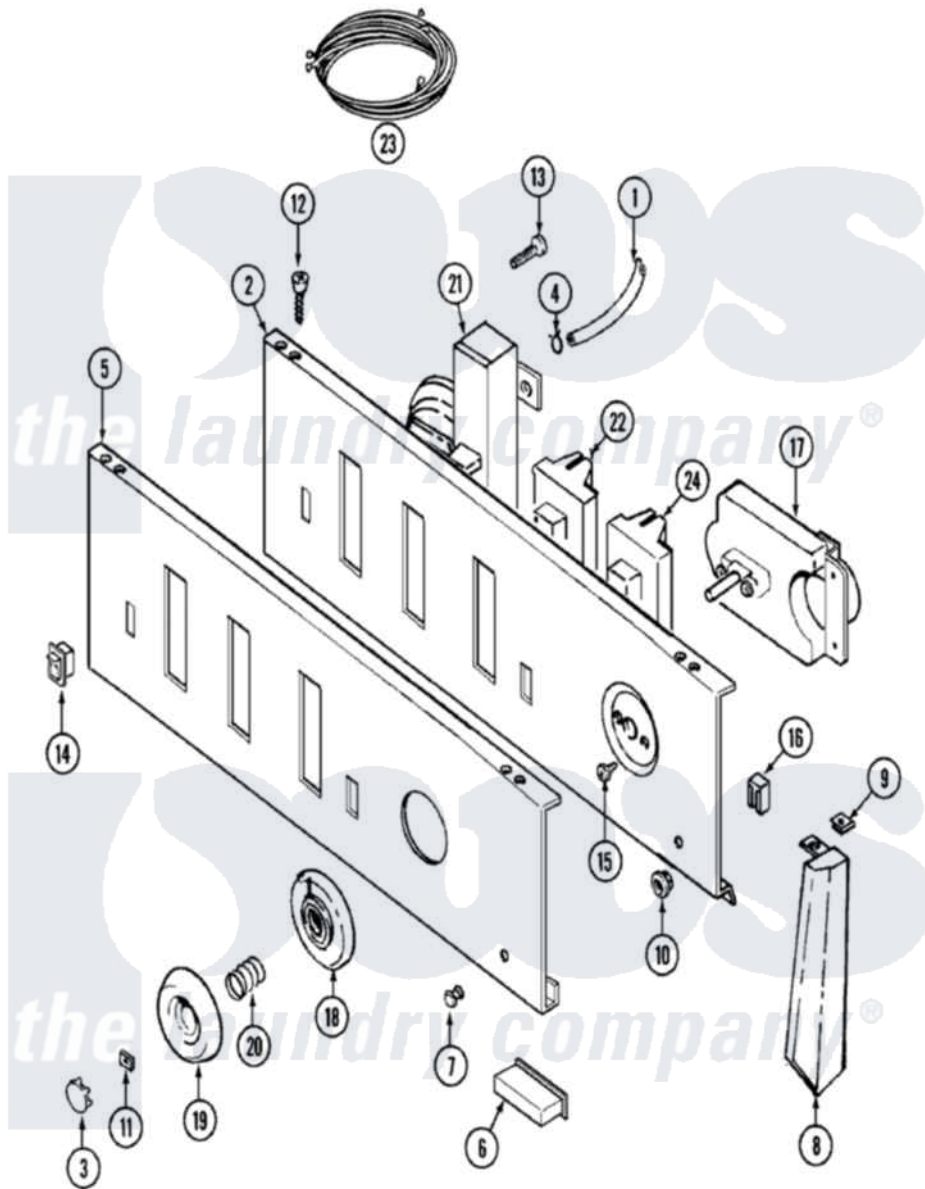

Maytag [Residential Maytag LAT6914AAL Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	22001036	<a href="#">22001619</a>		Tube, Water Level Switch
2	315483	<a href="#">3370225</a>		Screw
"	<a href="#">204807</a>			Ground Wire, Supp. Plte To Top Cover
"	<a href="#">22001133</a>			Plate, Support
3	216193		Not Available	CAP, TIMER KNOB (BLK)
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	22001014		Not Available	PANEL, CONTROL (BLK)
6	<a href="#">214897</a>			Pad, Control Panel
7	22001215	<a href="#">7730P011-60</a>		Lens, Indicator Light
8	<a href="#">22001288</a>			End Cap, Control Panel
"	<a href="#">22001290</a>			End Cap, Control Panel
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
11	<a href="#">211605</a>			Bezel, Timer Dial
12	311728	<a href="#">210032</a>		Screw, No.8 X 9/16 Ctsk Note:

12	<a href="#">214120</a>	<a href="#">21032</a>	Screw, Inlet Duct
13	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
14	22001134	<a href="#">22001135</a>	Switch, Rocker
15	<a href="#">216412</a>		Screw, Bracket To Timer
16	<a href="#">903115</a>		Lock Light
17	<a href="#">22001024</a>		Timer
18	22001264	Not Available	BEZEL, TIMER KNOB (BLK)
19	<a href="#">215828</a>		Knob, Timer
20	<a href="#">211065</a>		Spring, Index Wheel
21	208285	Not Available	SWITCH, INFINITE (BLK) SUB
22	22001209	Not Available	SWITCH, TEMPERATURE (BLK) OB
"	22001214	Not Available	SWITCH, WATER TEMP. (WHT)
23	<a href="#">22001338</a>		Wire Harness, Main
24	<a href="#">22001211</a>		Switch, Speed
25	<a href="#">22001094</a>		Manual, Use And Care
"	16000327	Not Available	GUIDE, QUICK REF. - MAYTAG

