


# Maytag LAT7304ABL 04 - CONTROL PANEL

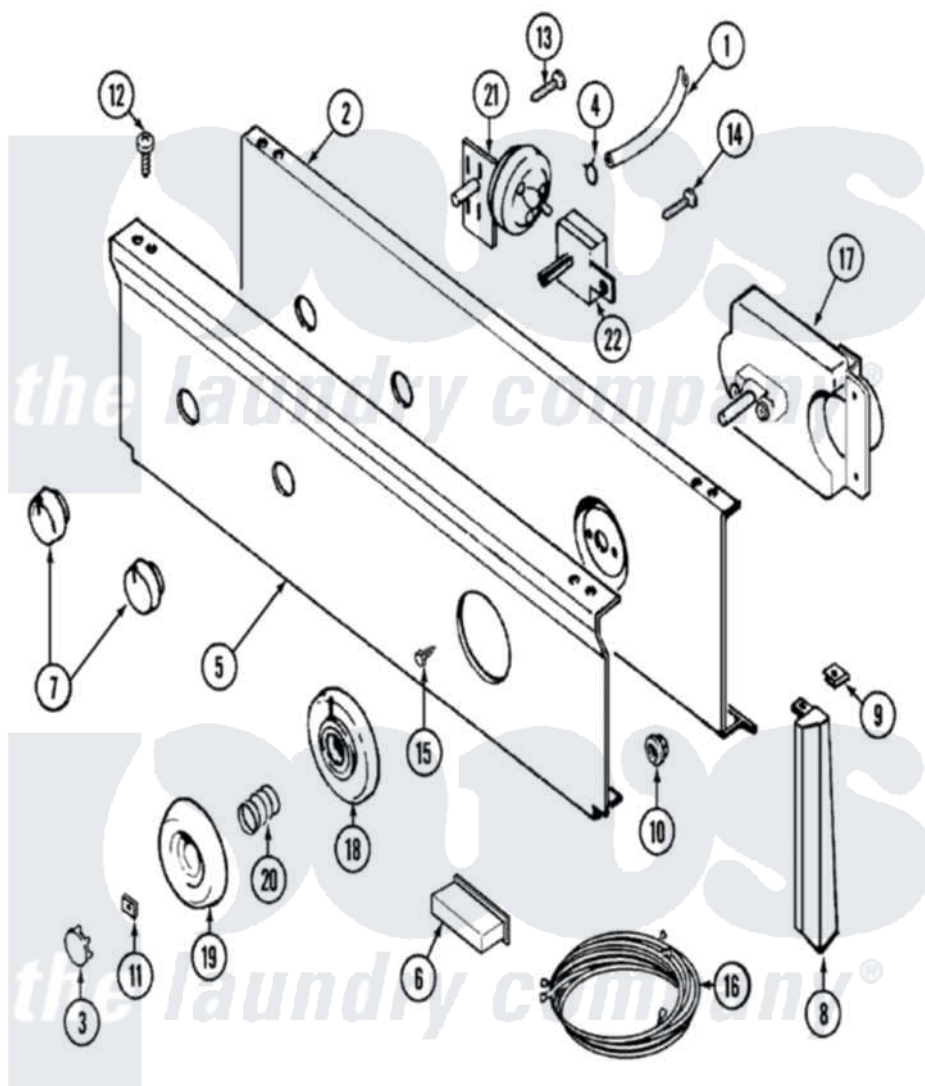

Maytag [Residential Maytag LAT7304ABL Washer Parts](#) Parts Diagram 04 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	22001036	<a href="#">22001619</a>		Tube, Water Level Switch
2	315483	<a href="#">3370225</a>		Screw
"	<a href="#">204807</a>			Ground Wire, Supp. Plte To Top Cover
"	<a href="#">22001132</a>			Plate, Support
3	216193		Not Available	CAP, TIMER KNOB (BLK)
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	<a href="#">22001219</a>			Panel, Control
6	<a href="#">214897</a>			Pad, Control Panel
7	<a href="#">22001267</a>			Knob, Selector Switch
8	<a href="#">22001290</a>			End Cap, Control Panel
"	<a href="#">22001288</a>			End Cap, Control Panel
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
11	<a href="#">211605</a>			Bezel, Timer Dial
12	311728	<a href="#">210032</a>		Screw, No.8 X 9/16 Ctsk Note:

12	214120	<a href="#">21032</a>		Screw, Inlet Duct
13	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
14	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
15	<a href="#">216412</a>			Screw, Bracket To Timer
16	<a href="#">22001316</a>			Wire Harness, Main
17	<a href="#">22001255</a>			Timer RPR
18	22001264		Not Available	BEZEL, TIMER KNOB (BLK)
19	<a href="#">215828</a>			Knob, Timer
20	<a href="#">211065</a>			Spring, Index Wheel
21	<a href="#">208206</a>			Switch, Pressure
22	22001106		Not Available	MANUAL, USE & CARE (FRENCH)
"	208283		Not Available	SWITCH, WATER TEMPERATURE

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>