


# Maytag LAT8826AAE 04 - CONTROL PANEL

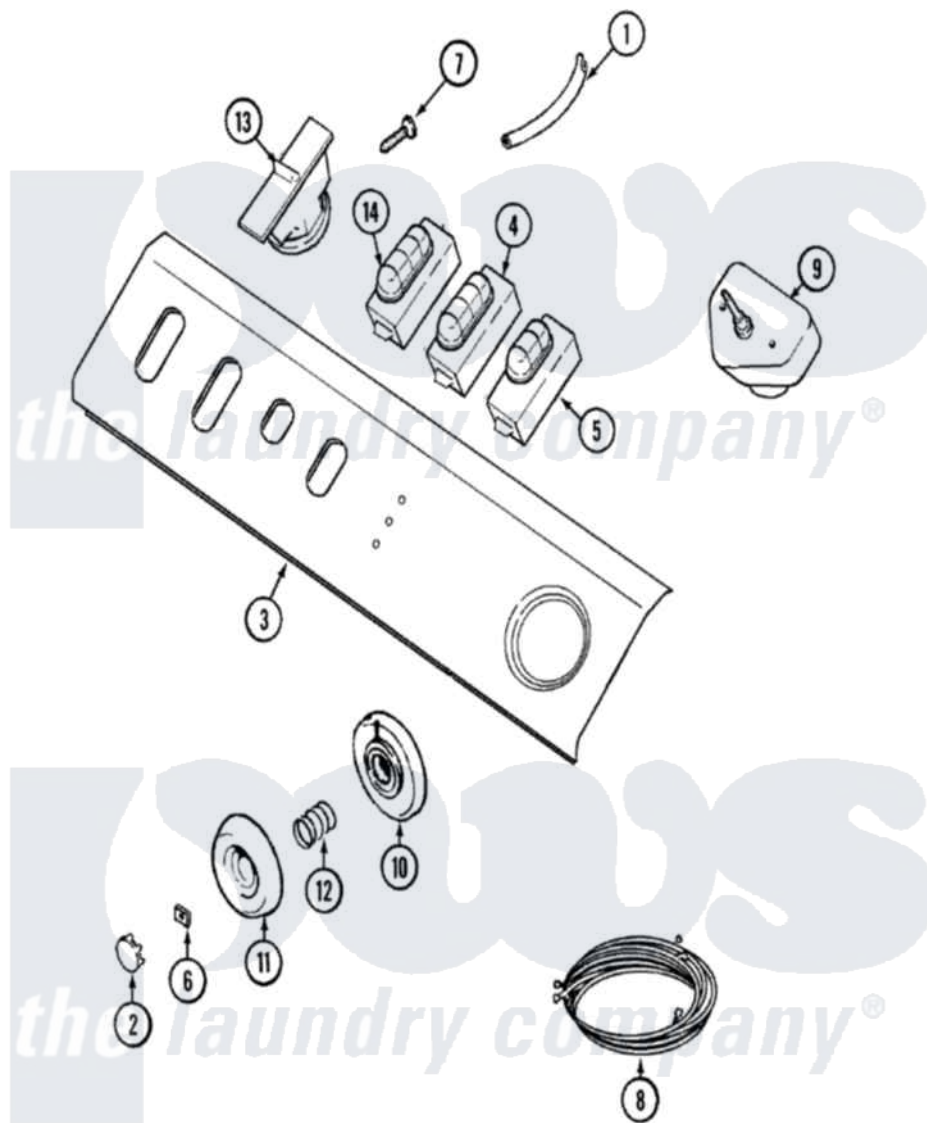

Maytag [Residential Maytag LAT8826AAE Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	22001036	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">22001664</a>			Timer Knob Insert/Cap
3	<a href="#">22001723</a>			Panel, Control
4	<a href="#">22001783</a>			Switch, Water Temp.
"	<a href="#">22001788</a>			Button, Switch
"	<a href="#">22001789</a>			Button, Switch
5	<a href="#">22001789</a>			Button, Switch
"	22001795		Not Available	SWITCH, SPEED CONTROL (WHT)
"	<a href="#">22001788</a>			Button, Switch
6	<a href="#">211605</a>			Bezel, Timer Dial
7	22001662	<a href="#">8534058</a>		Screw
8	<a href="#">22001760</a>			Wire Harness, Main
"	<a href="#">22001948</a>			Lens, Indicator Light
"	<a href="#">903115</a>			Lock Light
"	<a href="#">22002211</a>			Harness, Wire
9	22001661	<a href="#">3400094</a>		Screw, 10-32 X 3/8

"	22002189	<a href="#">22004262</a>	Timer
"	<a href="#">22001694</a>		Timer
10	<a href="#">22001660</a>		Dial Skirt - White
11	<a href="#">22001659</a>		Timer Knob - Grey
12	<a href="#">211065</a>		Spring, Index Wheel
13	22001777	Not Available	SWITCH, WATER LEVEL (INF.-WHT)
14	<a href="#">22001788</a>		Button, Switch
"	<a href="#">22001789</a>		Button, Switch
"	<a href="#">22001908</a>		Switch, Option
15	22002421	Not Available	MANUAL, USE & CARE
"	16000327	Not Available	GUIDE, QUICK REF. - MAYTAG
"	22001772	Not Available	MANUAL, USE & CARE (FRENCH)

