


Maytag LAT9200BBM 06 - TRANSMISSION (WHT/WHT & ALM/ALM)

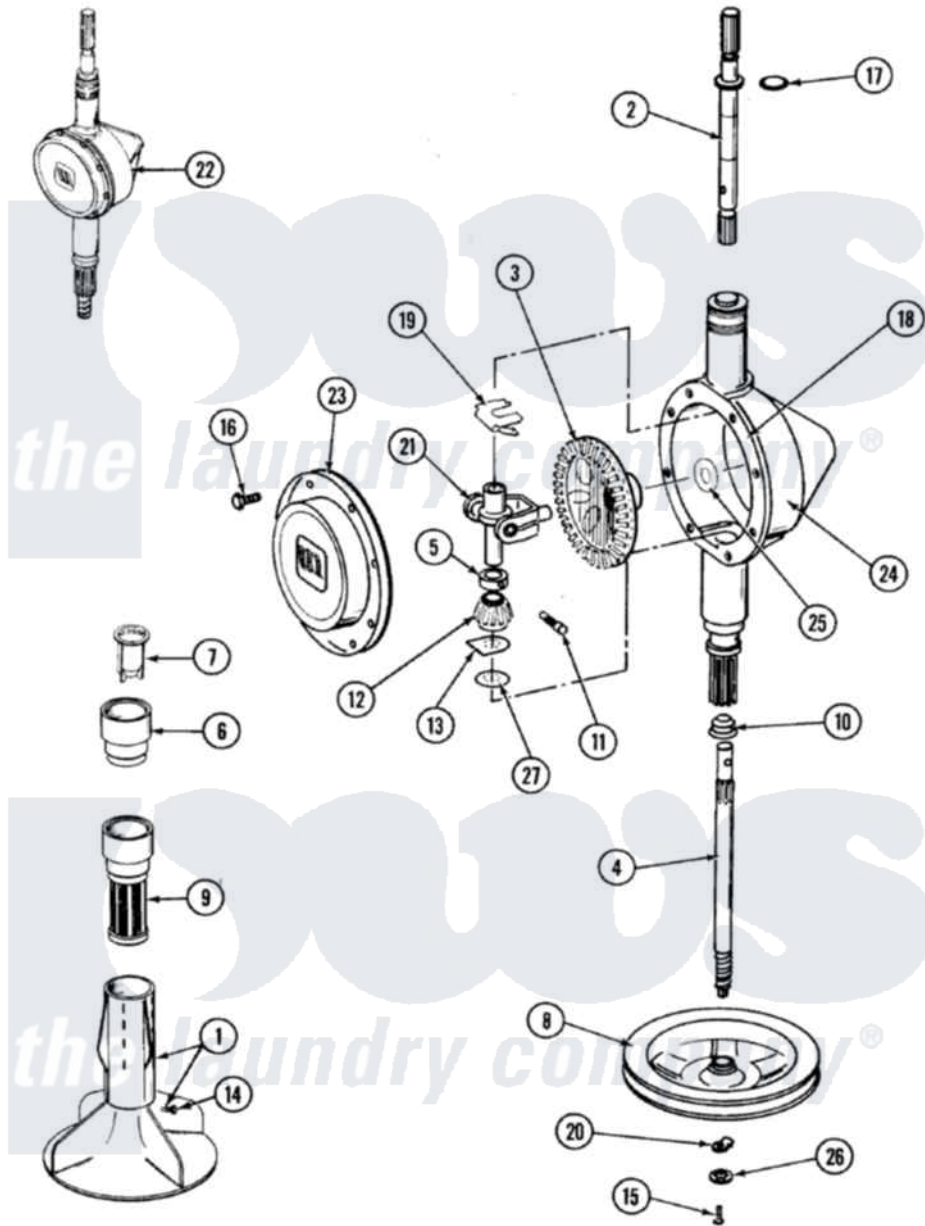

Maytag Residential Maytag LAT9200BBM Washer Parts Parts Diagram 06 - TRANSMISSION (WHT/WHT & ALM/ALM)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	207228			Agitator W/Lock Screw
2	207153	6-2097820		Kit- Shaft
3	206713	6-2067130		Gear- Beve
4	215410	12001450		Ctr Shaft W/Collar Andkeeper- Dp
5	215415		Not Available	COLLAR, LOWER
6	215721			Dispensing Cap
7	215733			Dispensing Cup
8	211059	6-2301530		Pulley
10	206602	207843		Lip Seal Repair Kit
11	Y206629			Pin, Collar
12	215401	W10221114		Pinion
13	215395			Plate, Clutch
14	206478		Not Available	SCREW & WASHER FOR AGITATOR
15	211375	681582		Screw
16	215417		Not Available	SCREW, TRANSMISSION

16	213417	Not Available	COVER
17	210690		Seal, Rubber
18	Y058700	675652	Adhesive
19	215581		Spring, Agitator Shaft
20	211089		Lug, Stop Pulley
21	206685	6-2066850	Yoke
22	206707	6-2097750	Trans Dee
23	206628		Cover, Transmission
24	206624	6-2097750	Trans Dee
25	215394		Washer, Bevel Gear
26	211090	22003555	Washer, Stop Lug
27	211483	6-2114830	Washer- SP

the laundry company[®]

the laundry company[®]

the laundry company[®]