

# Maytag LAT9634AAE 04 - CONTROL PANEL



Maytag [Residential Maytag LAT9634AAE Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	22001036	<a href="#">22001619</a>		Tube, Water Level Switch
2	315483	<a href="#">3370225</a>		Screw
"	<a href="#">204807</a>			Ground Wire, Supp. Plte To Top Cover
"	<a href="#">22001132</a>			Plate, Support
3	216250	<a href="#">22001446</a>		Cap, Knob
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	<a href="#">22001237</a>			Panel, Control
6	<a href="#">214897</a>			Pad, Control Panel
7	22001215	<a href="#">7730P011-60</a>		Lens, Indicator Light
8	<a href="#">22001291</a>			End Cap, Control Panel
"	22001289		Not Available	END CAP, CTRL. PNL. (LT-WHT)
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
11	<a href="#">211605</a>			Bezel, Timer Dial

12	<a href="#">210932</a>		Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
13	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
14	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
15	<a href="#">216412</a>		Screw, Bracket To Timer
16	<a href="#">903115</a>		Lock Light
17	22001254	<a href="#">22001638</a>	Timer
18	<a href="#">22001265</a>		Bezel, Timer Knob
19	22001198	Not Available	KNOB, TIMER (WHT)
20	<a href="#">211065</a>		Spring, Index Wheel
21	<a href="#">208201</a>		Switch, Pressure
22	208281	Not Available	SWITCH, TEMP (4POSITION)
23	<a href="#">22001313</a>		Wire Harness, Main
24	22001268	Not Available	KNOB ASSY. (WHT)

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>