


# Maytag LAT9706AAQ 04 - CONTROL PANEL (9706)

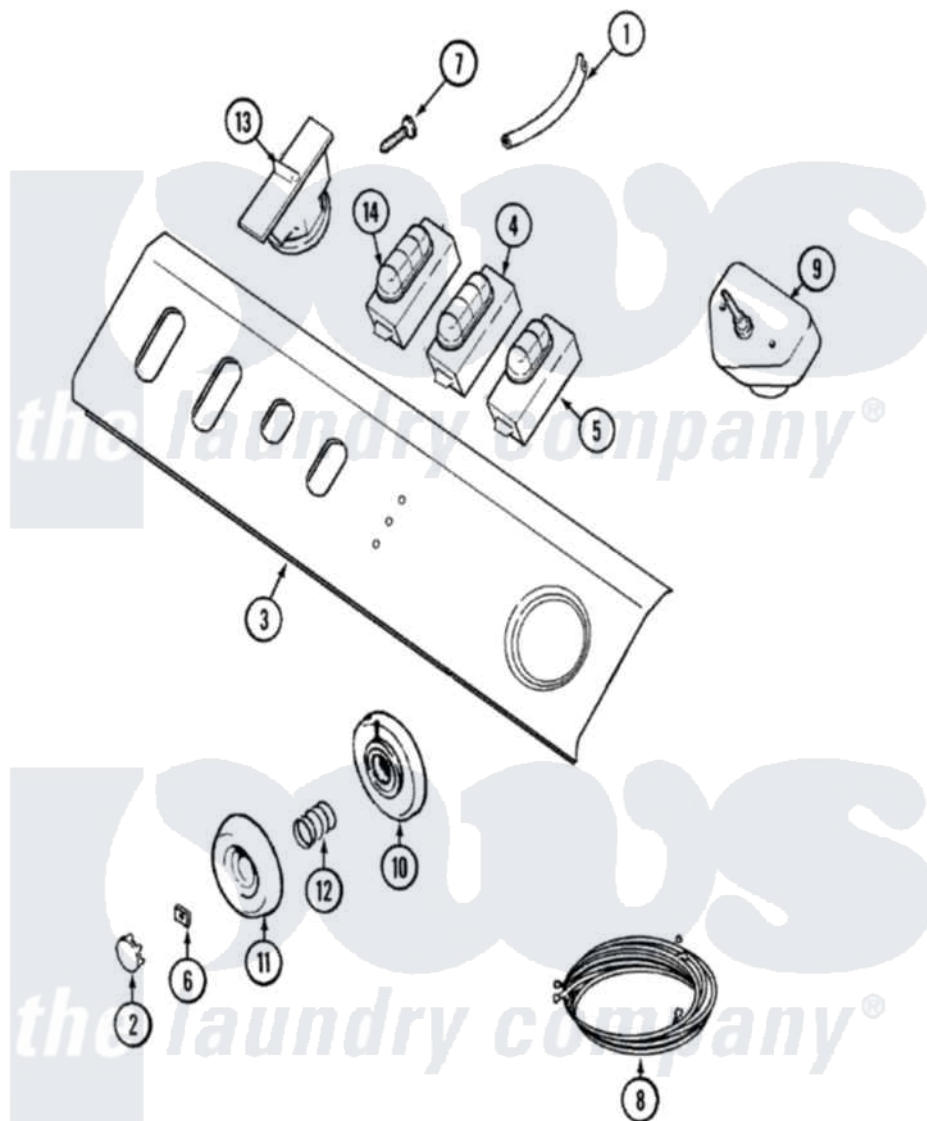

Maytag [Residential Maytag LAT9706AAQ Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (9706)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	22001036	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">33002347</a>			Timer Knob Insert/Cap
3	<a href="#">22002894</a>			Panel, Control
4	<a href="#">22002697</a>			Button, Switch
"	<a href="#">22002585</a>			Switch, Push Button
"	22002698	<a href="#">22003875</a>		Button- SW
5	<a href="#">22002697</a>			Button, Switch
"	22002698	<a href="#">22003875</a>		Button- SW
"	<a href="#">22002895</a>			Switch, Speed Control
6	<a href="#">211605</a>			Bezel, Timer Dial
7	22001662	<a href="#">8534058</a>		Screw
8	<a href="#">903115</a>			Lock Light
"	<a href="#">22002210</a>			Harness, Wire
"	<a href="#">22001948</a>			Lens, Indicator Light
9	22001661	<a href="#">3400094</a>		Screw, 10-32 X 3/8
"	22002189	<a href="#">22004262</a>		Timer

10	22002598	<a href="#">22003920</a>	Dial Skirt
11	<a href="#">22001659</a>		Timer Knob - Grey
12	<a href="#">211065</a>		Spring, Index Wheel
13	22002588	Not Available	SWITCH, PRESSURE (BSQ)
14	<a href="#">22002593</a>		Switch, Push Button
"	<a href="#">22002697</a>		Button, Switch
"	22002698	<a href="#">22003875</a>	Button- SW
15	16000327	Not Available	GUIDE, QUICK REF. - MAYTAG
"	22002421	Not Available	MANUAL, USE & CARE

