


# Maytag LAT9806GGE 04 - CONTROL PANEL

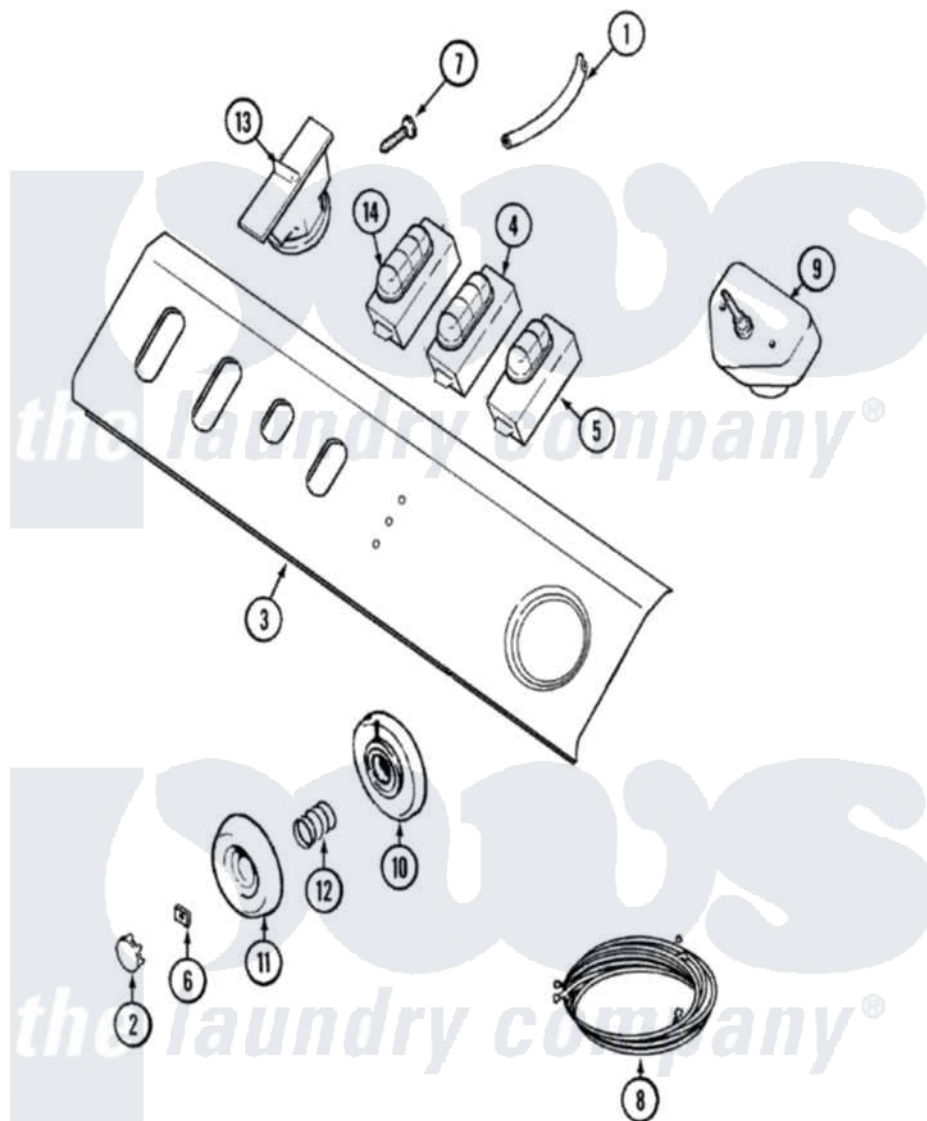

Maytag [Residential Maytag LAT9806GGE Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	22001036	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">22001664</a>			Timer Knob Insert/Cap
3	<a href="#">22001725</a>			Panel, Control
4	<a href="#">22001788</a>			Button, Switch
"	<a href="#">22001783</a>			Switch, Water Temp.
"	<a href="#">22001789</a>			Button, Switch
5	<a href="#">22001789</a>			Button, Switch
"	<a href="#">22001788</a>			Button, Switch
"	<a href="#">22001797</a>			Switch, Speed Control
6	<a href="#">211605</a>			Bezel, Timer Dial
7	22001662	<a href="#">8534058</a>		Screw
8	<a href="#">22001947</a>			Wire Harness, Main
"	<a href="#">22001403</a>			Light, Indicator
"	<a href="#">22001948</a>			Lens, Indicator Light
"	<a href="#">22002216</a>			Harness, Wire
9	<a href="#">22001849</a>			Timer

"	22001661	<a href="#">3400094</a>	Screw, 10-32 X 3/8
"	<a href="#">22002198</a>		Timer
10	<a href="#">22001660</a>		Dial Skirt - White
11	<a href="#">22001659</a>		Timer Knob - Grey
12	<a href="#">211065</a>		Spring, Index Wheel
13	22001850	Not Available	SWITCH, WATER LEVEL (INF.)
14	<a href="#">22001788</a>		Button, Switch
"	<a href="#">22001789</a>		Button, Switch
"	<a href="#">22001793</a>		Switch, Pushbutton
15	16000327	Not Available	GUIDE, QUICK REF. - MAYTAG
"	22001767	Not Available	MANUAL, USE & CARE

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>